
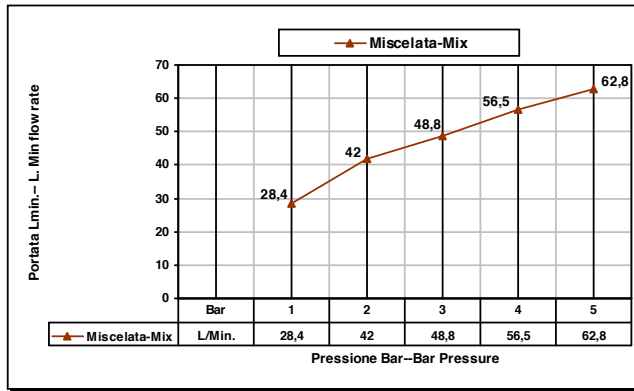


# ISTRUZIONI DI MONTAGGIO

Pressione dinamica minima di utilizzo 0,5 bar.  
Minimum dynamic pressure of use: 0,5 Bar.

PORTATE A PRESSIONE DINAMICA SENZA LIMITATORE  
FLOW RATES AT DYNAMIC PRESSURE WITHOUT LIMITATION SYSTEM

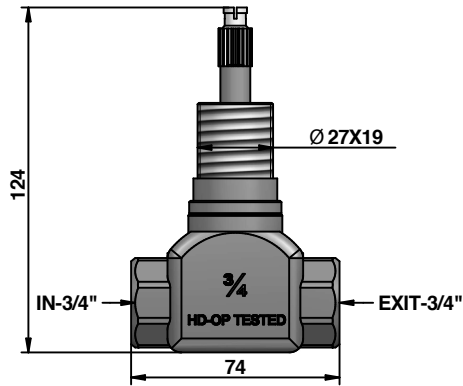


# INSTALLATION INSTRUCTIONS


Per Art- 30-31-42498-40498-40498/R  
For item - 30-31-40-42498-40498-40498/R

**A**


MIN 45mm. - MAX 55mm.

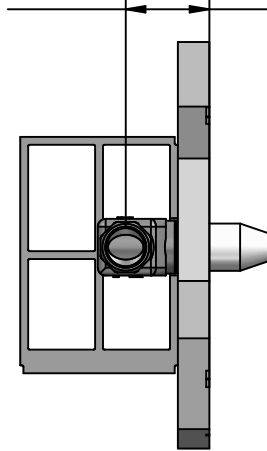



**B**

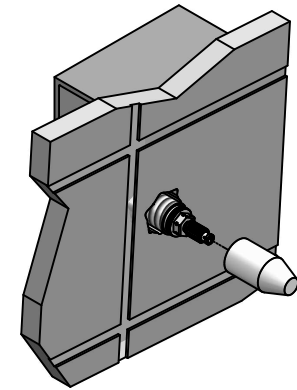

**C**

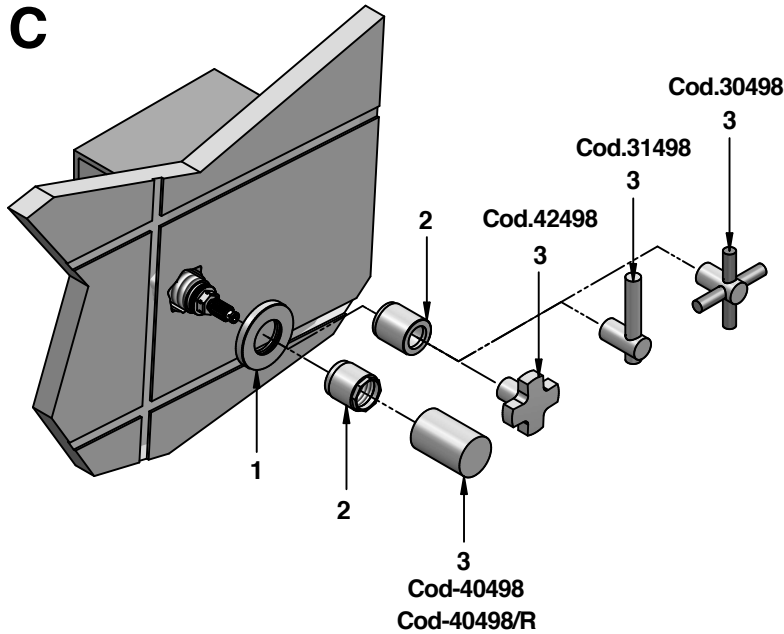

Per Art- 09772 (498/EU)  
For Item-09772 (498/EU)

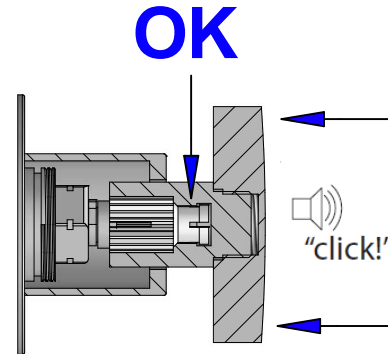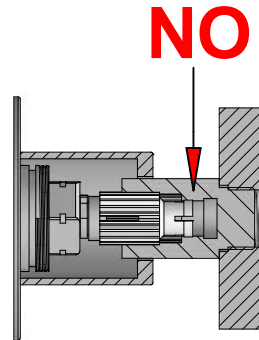

PRESSIONE MINIMA DI SERVIZIO :.....0,5 bar  
PRESSIONE DI SERVIZIO MASSIMA :.....5 bar  
PRESSIONE D'USO CONSIGLIATA :.....3 bar  
TEMPERATURA ACQUA CALDA MAX :..... 80°C  
TEMPERATURA ACQUA CALDA CONSIGLIATA :.....60°C

In caso di pressione d'esercizio superiore a 5 bar è consigliabile installare un riduttore di pressione sulle tubature di alimentazione.

MINIMUM WORKING PRESSURE:.....0,5 bar  
MAX OPERATING PRESSURE :.....5 bar  
RECOMMENDED OPERATION PRESSURE :.....3 bar  
MAX HOT WATER TEMPERATURE :.....80°C  
RECOMMENDED HOT WATER TEMPERATURE :.....60°C

In case of operating pressures higher than 5 bar it is recommended to install a pressure reducer on the feeding tubes.

**bongio**

Istruzioni montaggio

Per Art- 30-31-42498-40498-40498/R  
E parti esterne per Art- 09772 (498/EU)

Installation instruction

For item - 30-31-40-42498-40498-40498/R  
And external parts for Item-09772 (498/EU)

Mario Bongio s.r.l.

Via Aldo Moro, 2

28017 San Maurizio d'Opaglio (NO) - Italy

tel: +39 0322 967248 fax: +39 0322 950012

www.bongio.com - info@bongio.it