


JUKM31

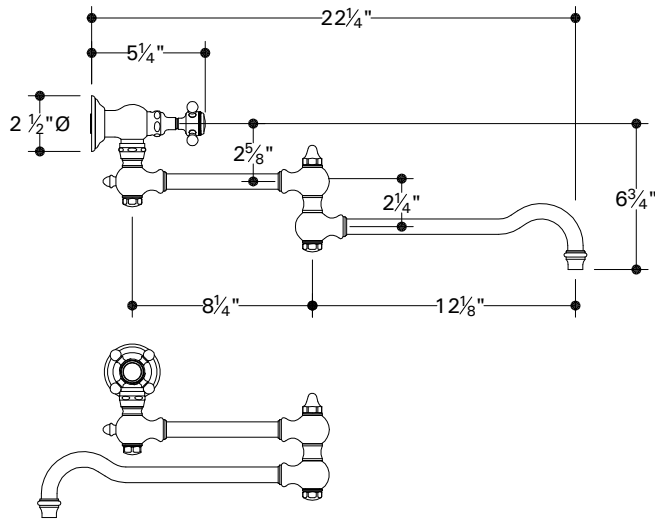

INSTALLATION:

1. Slide the escutcheon (1,2) back towards the handle then loosen the four - 1.5 mm set screws (16) and remove the spout adapter (3,4) from the spout.
2. Dry fit the spout adapter onto the 1/2" copper. Cut the copper to the proper length by making sure the copper does not protrude past the end of the spout adapter.
3. Remove O-rings (4) from spout adapter, then solder it to the copper pipe. Allow to cool and reinstall O-rings.
4. Push the faucet onto the spout adapter and tighten the four set screws.
5. Slide the escutcheon flush to the wall; apply silicone to the back of the sliding escutcheon as needed.
6. Unthread the aerator assembly (29-31) from the spout. Carefully open the valves to flush out any debris in the supply lines.
7. Inspect all connections for leaks. Reinstall the aerator assembly
8. To access the valve cartridge:
 - a. Disassemble the index assembly (11-15) as 1 unit from the handle by lifting the ring (15) off of the handle.
 - b. Insert a small bladed screw driver into the handle and loosen the screw (10) then pull the handle off the cartridge (6).
 - c. Unthread the cover (7) from the cartridge (6) from the spout body (5).

IMPORTANT

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to local codes.
- This product must be installed by a professional contractor.
- Inspect this product to assure you have all parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface

ROUGH IN:

1. Determine the ideal location of the faucet body based on the clients preference.
2. Finish the rough in by installing a well supported 1/2" copper.


REQUIRED: Copper supply must be secured, plumb, and level. See Figure 1. Failure to properly secure the pipes will cause the faucet to sit crooked.

3. Make sure a 1 3/8" hole is cut in the mounting surface to allow for proper mounting.

If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST).

These guidelines have been prepared for the professional contractor to aid in the installation of: **JULIA POT FILLER WITH CROSS HANDLE (JUKM31)** All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S

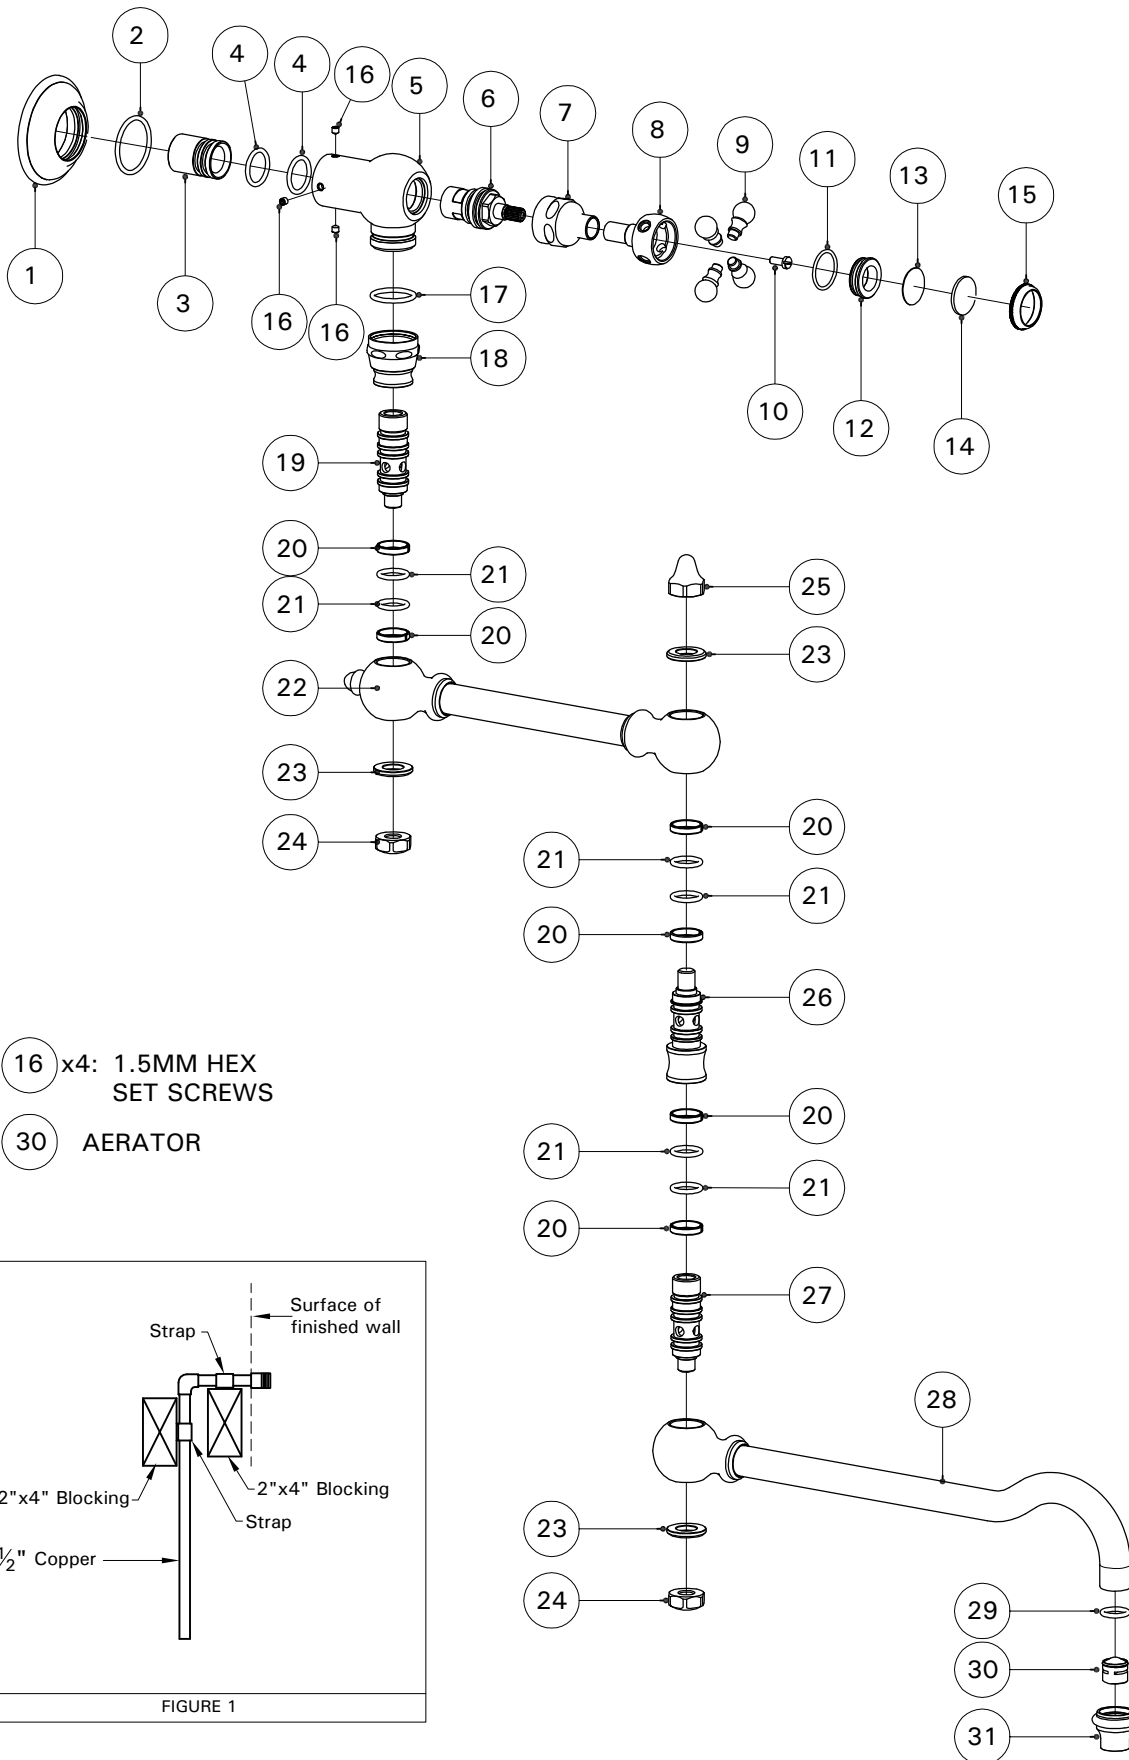

These guidelines have been prepared for the professional contractor to aid in the installation of **JULIA POT FILLER WITH CROSS HANDLE (JUKM31)**. All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S

PARTS TABLE		
ITEM NO.	DESCRIPTION	QTY.
1	ESCUTCHEON, FLAT	1
2	ESCUTCHEON O-RING	1
3	SPOUT ADAPTER, ½" SWEAT INLET	1
4	O-RING	2
5	SPOUT BODY	1
6	CARTRIDGE/STEM	1
7	COVER	1
8	HANDLE HUB	1
9	HANDLE SPOKE	4
10	SCREW, HANDLE	1
11	O-RING	1
12	INDICE RETAINER	1
13	INDICE PAD	1
14	INDICE	1
15	INDICE TRIM RING	1
16	SET SCREWS, 1.5MM HEX	4
17	O-RING	1
18	COVER	1
19	SPOUT POST	1
20	BUSHING, PLASTIC	6
21	O-RING	6
22	SPOUT, SECONDARY	1
23	WASHER, FINISHED	2
24	NUT, FINISHED	2
25	CAP	1
26	SPOUT POST, SECONDARY-FINISHED	1
27	SPOUT POST, SECONDARY-UNFINISHED	1
28	SPOUT	1
29	O-RING	1
30	AERATOR	1
31	AERATOR HOUSING	1

These guidelines have been prepared for the professional contractor to aid in the installation of **JULIA POT FILLER WITH CROSS HANDLE (JUKM31)**. All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S