



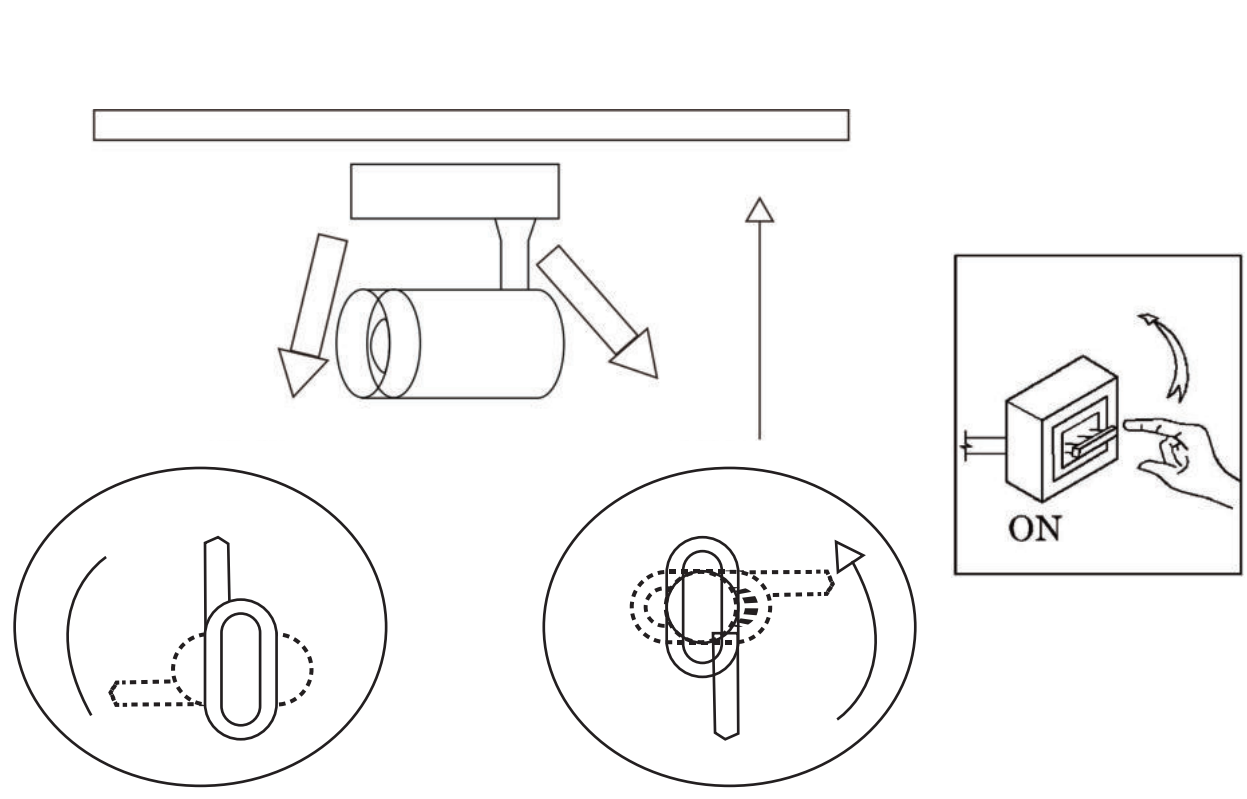

ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ

| | | | | | |
|-------------|-------------|-------------|-------------|-------------|-------------|
| A1710PL-1BK | A1720PL-1BK | A1730PL-1BK | A1613PL-1BK | A1640PL-1BK | A2324PL-1BK |
| A1710PL-1WH | A1720PL-1WH | A1730PL-1WH | A1613PL-1WH | A1640PL-1WH | A2324PL-1WH |
| A2310PL-1BK | A2320PL-1BK | A2330PL-1BK | A1632PL-1BK | A2315PL-1BK | |
| A2310PL-1WH | A2320PL-1WH | A2330PL-1WH | A1632PL-1WH | A2315PL-1WH | |
| A1711PL-1BK | A1721PL-1BK | A1731PL-1BK | | | |
| A1711PL-1WH | A1721PL-1WH | A1731PL-1WH | | | |
| A2311PL-1BK | A2321PL-1BK | A2331PL-1BK | | | |
| A2311PL-1WH | A2321PL-1WH | A2331PL-1WH | | | |

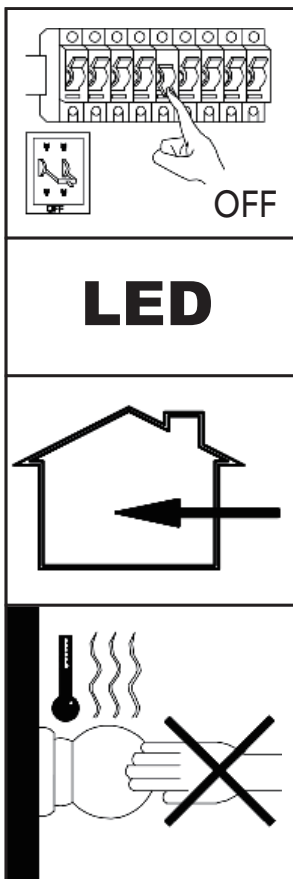

Warning:

1. Turn off the main power at the circuit breaker before installing in order to prevent possible shock;
2. Don't exceed the rated voltage 230V;
3. Don't install on haven't finished ceiling and loose wood ceiling;
4. Do not use corrosive liquids to clean fixture such as acid, and alkaline liquids. Please use soft cloth when cleaning.