



ISTRUZIONI DI MONTAGGIO

IT


FITTING INSTRUCTIONS

EN


NOTICE DE MONTAGE

FR

WallPaper

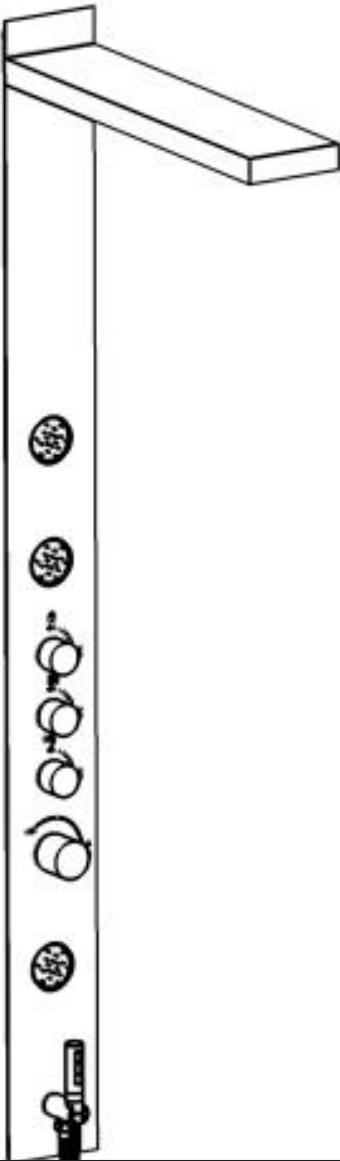


Ingombro Footprint Dessin technique

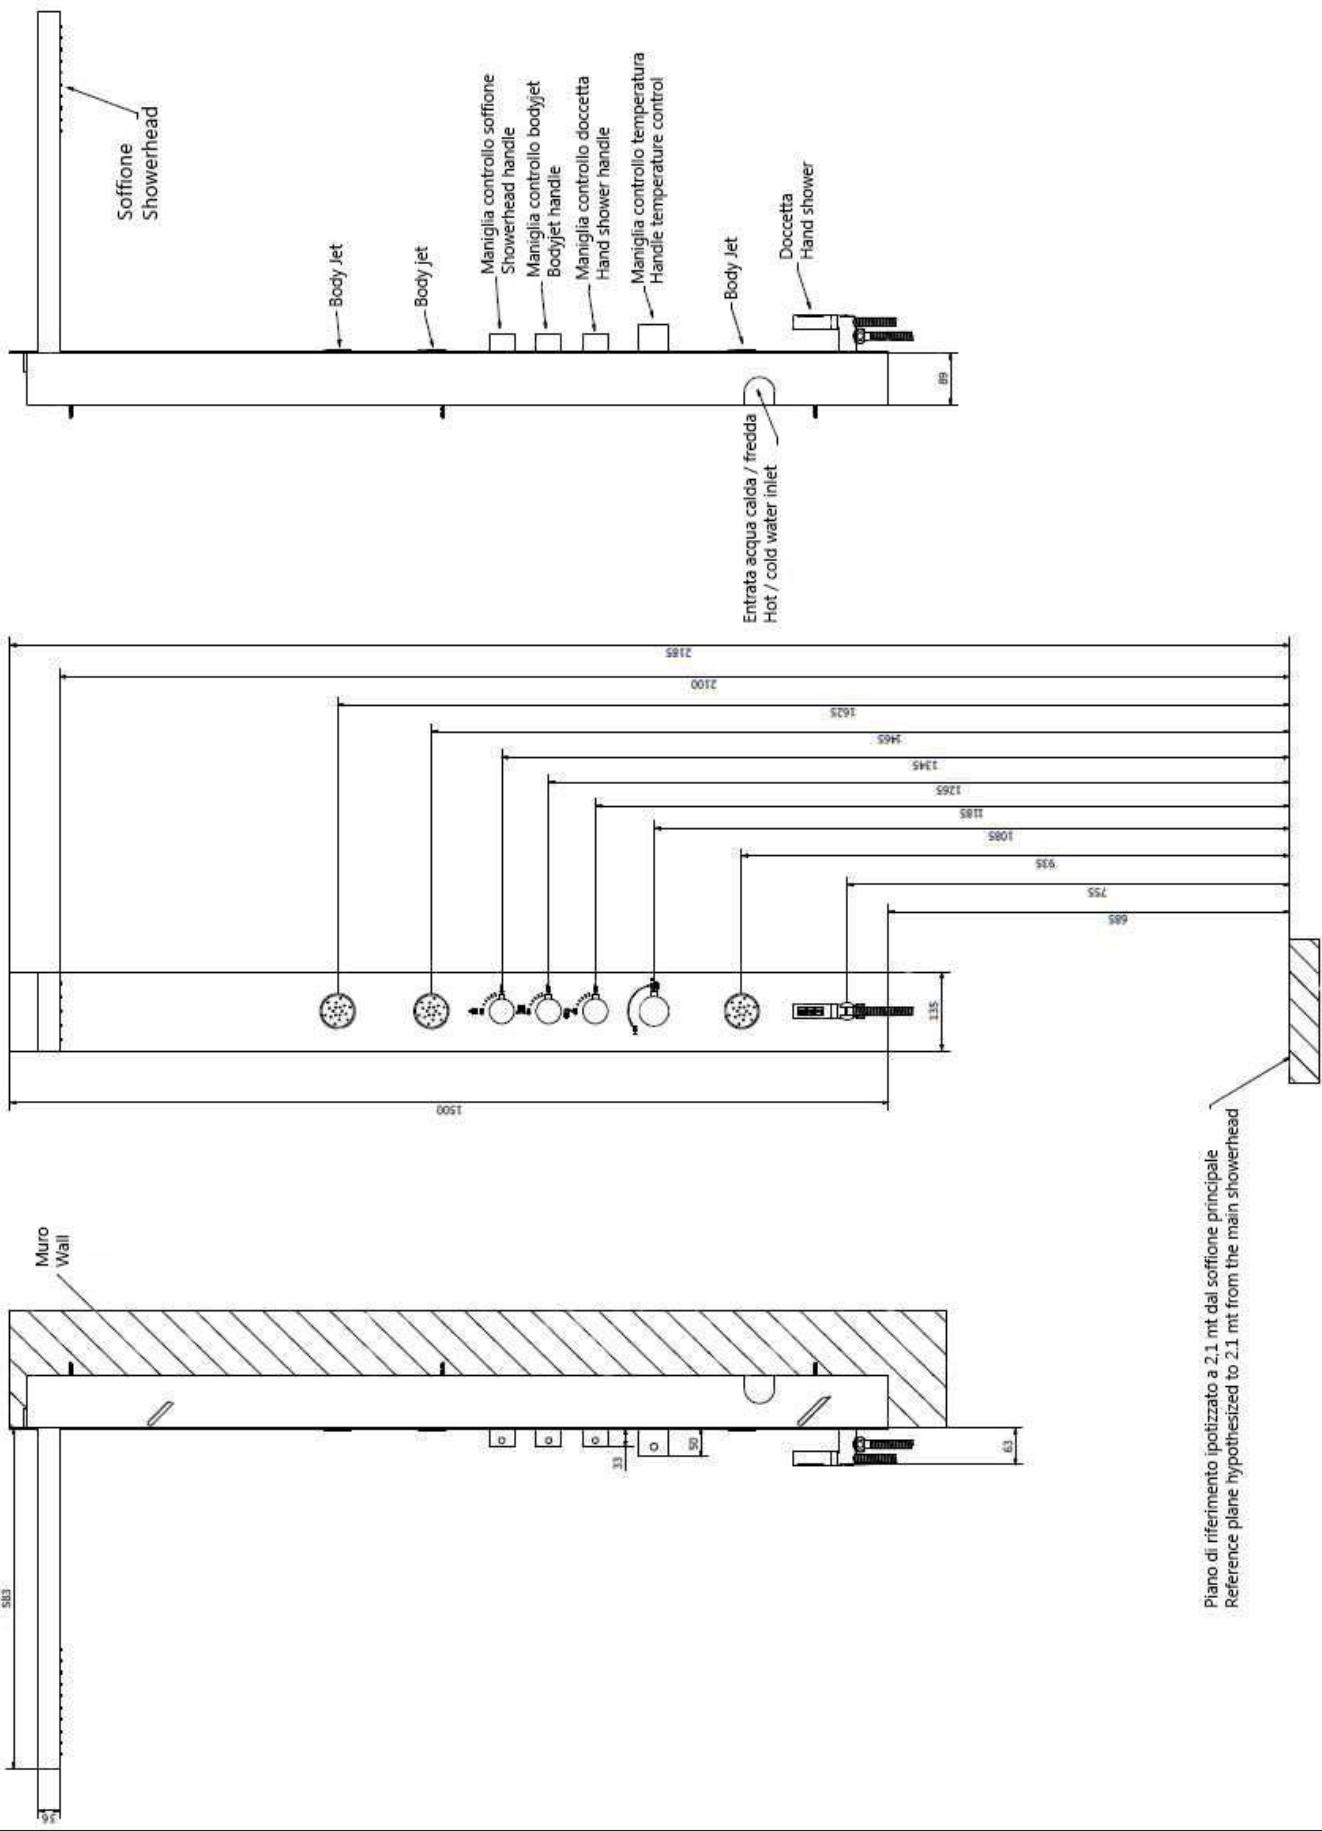


Funzionamento maniglie
Handle operation
Fonctionnement des poignées


Maniglia soffione
Handle of shower

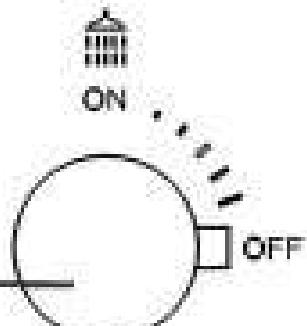


Maniglia bodyjet
Handle of bodyjet

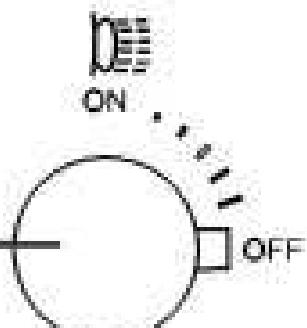

Maniglia doccetta
Handle of handshower

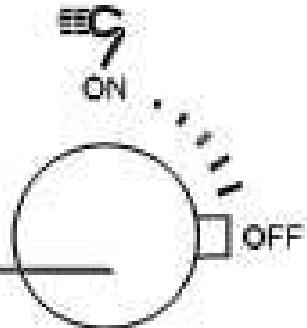


Maniglia temperatura
Handle of temperature

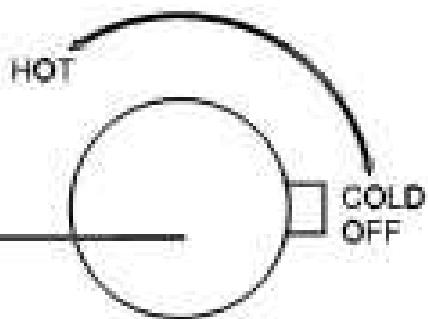

Collegamento flessibili

Hose connection


Branchement flexibles

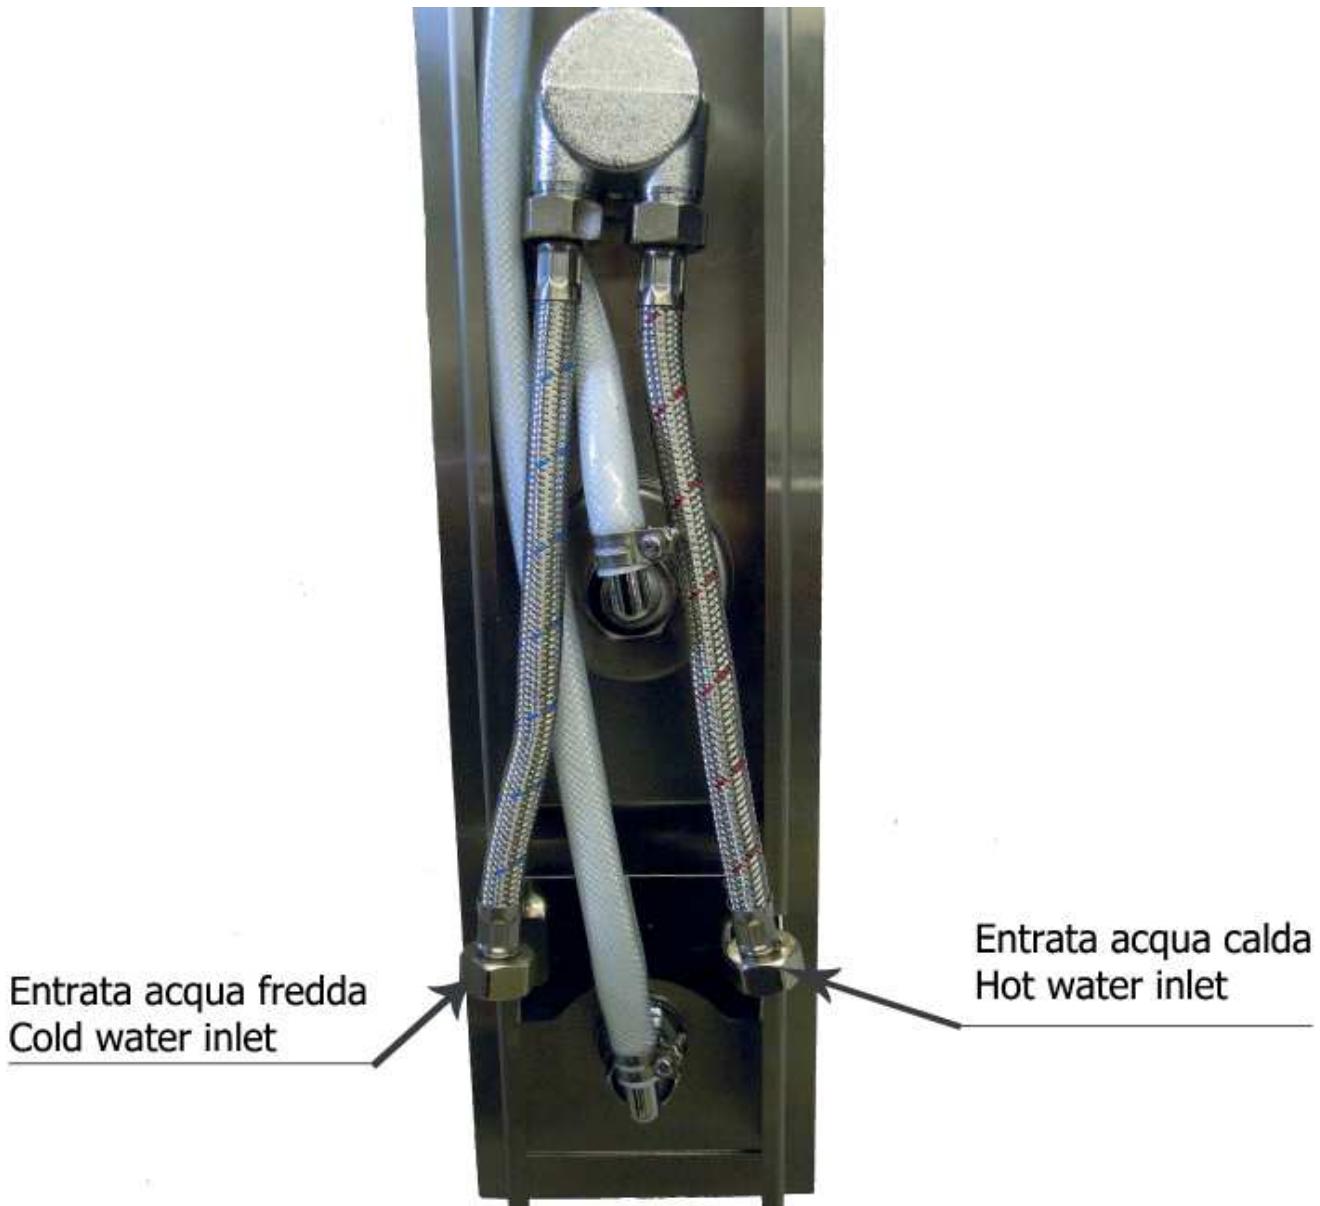

Spacco muro

Wall hole


Saignée dans le mur

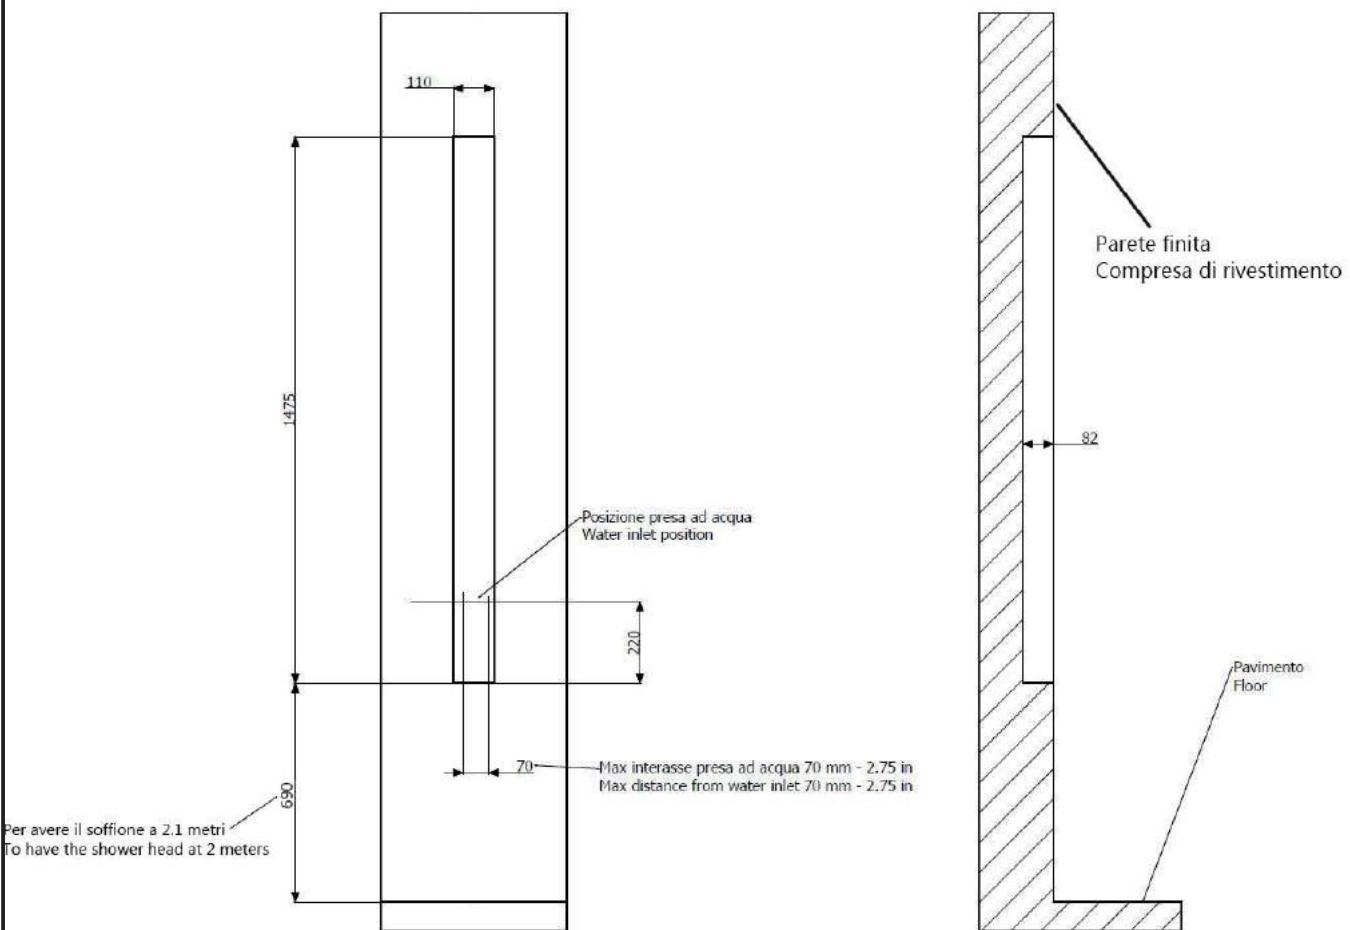


Fissaggio box interno con tasselli

Fixing box with rawplug


Châssis de montage avec des boulons d'ancrage

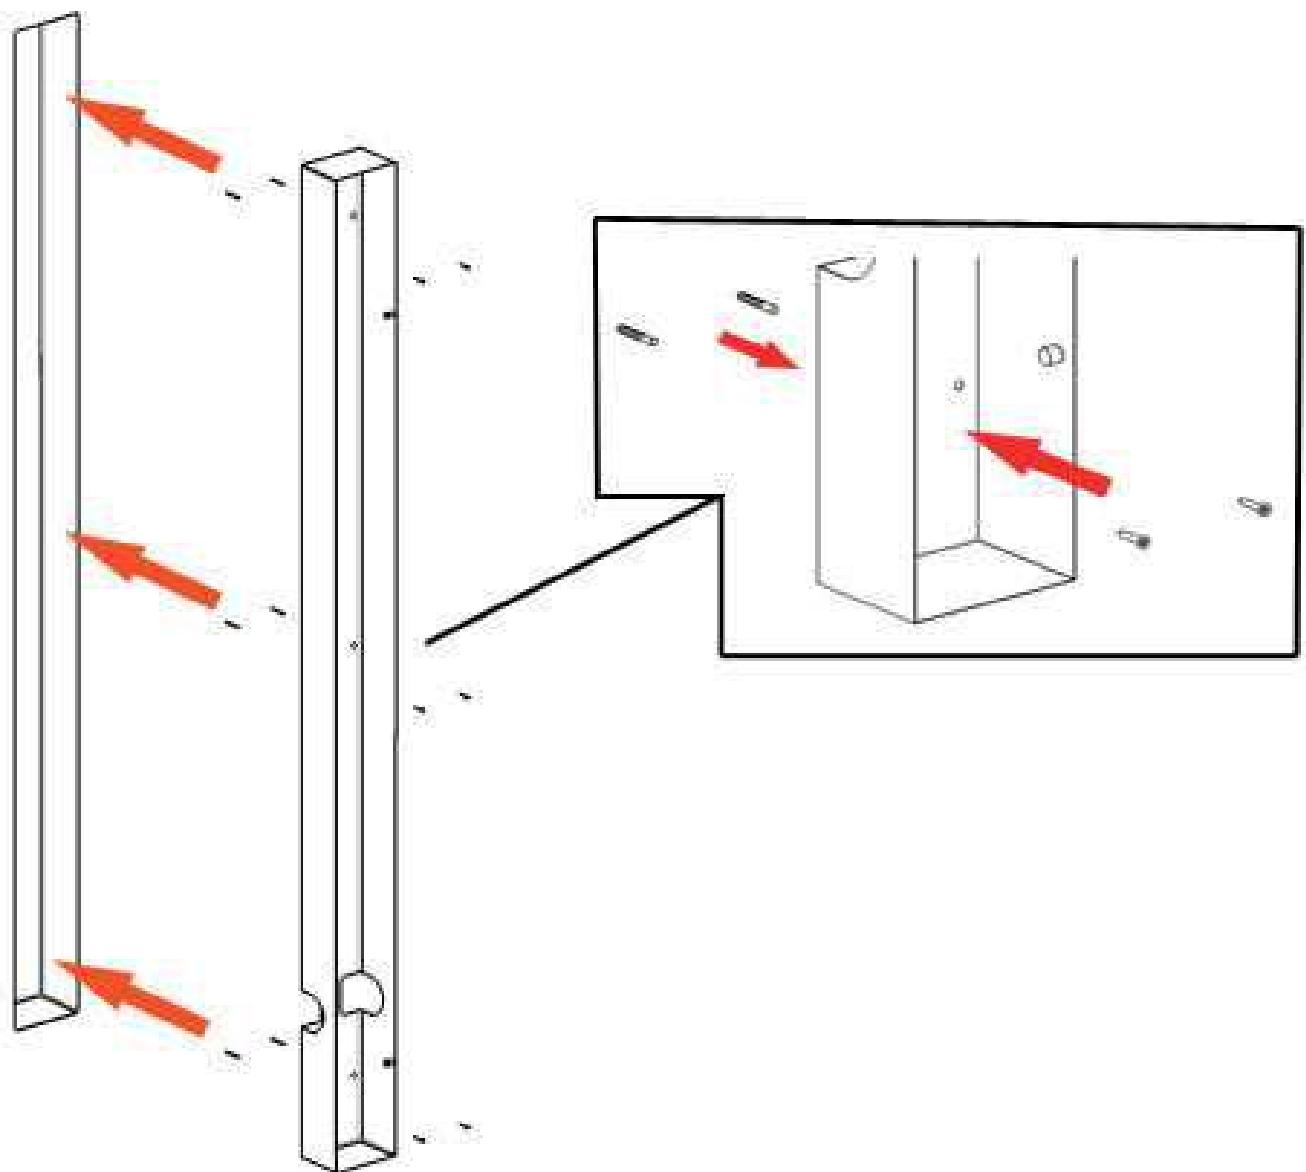

Collegamento flessibili
Hose connection
Branchement flexibles

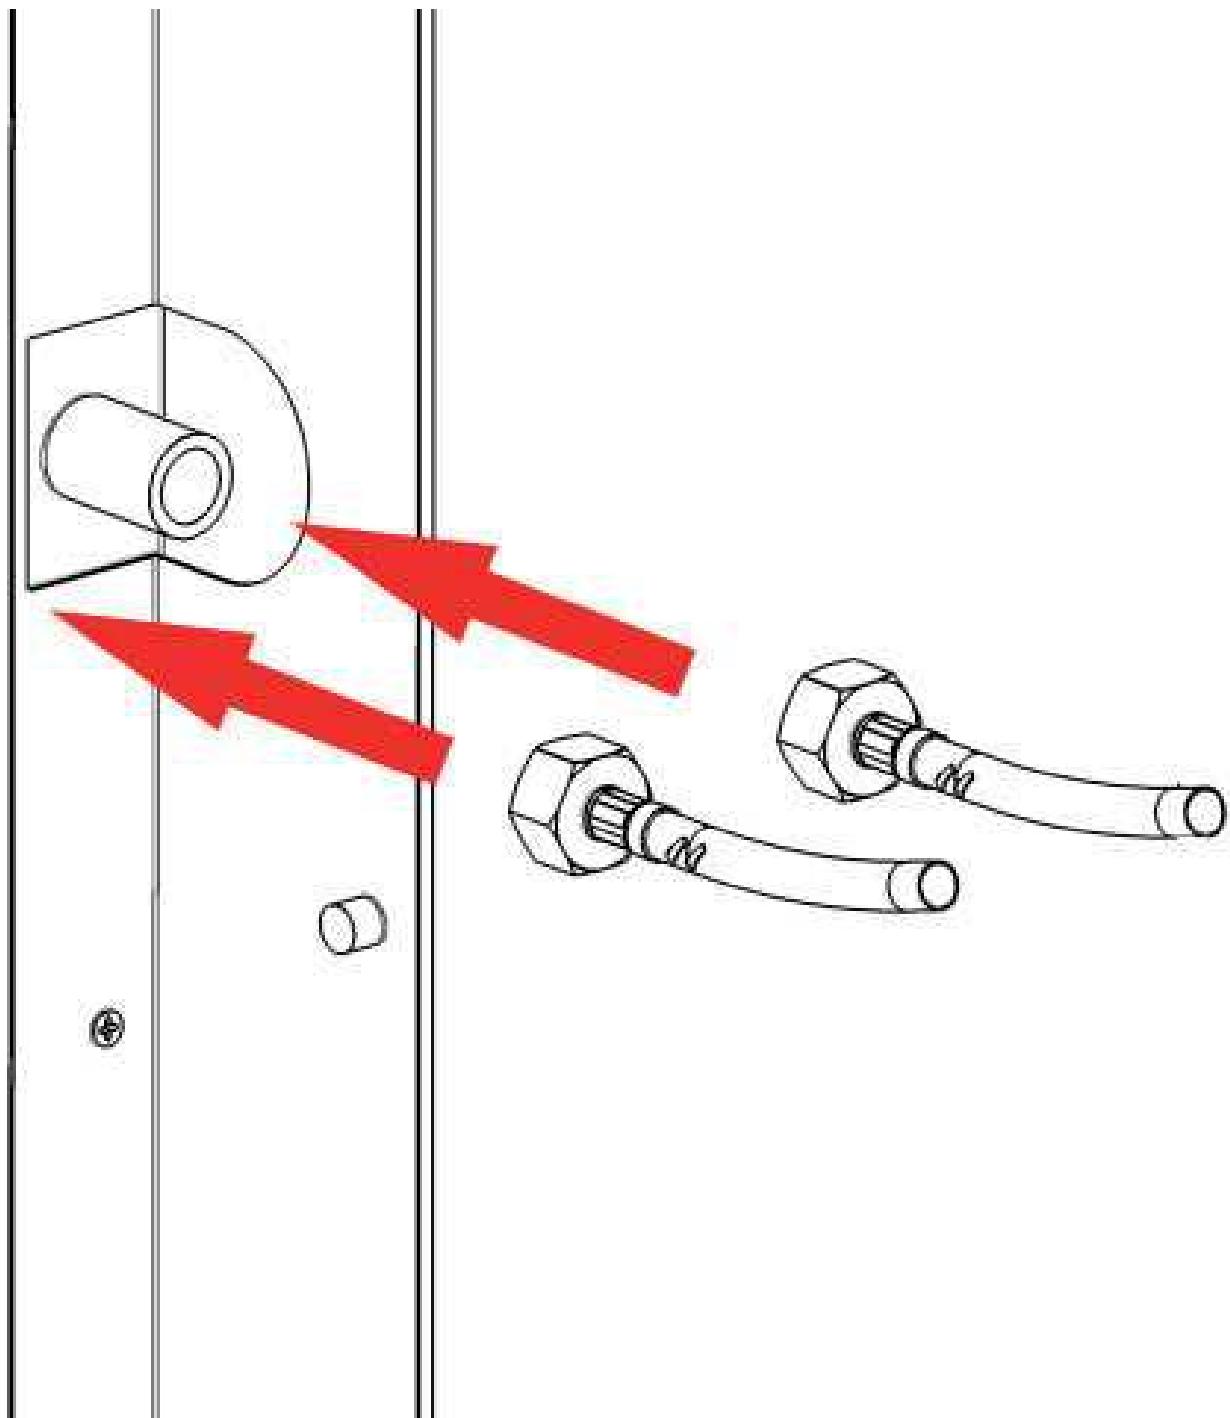


Fissaggio soffione Showerhead fixing Fixation de la tête de douche

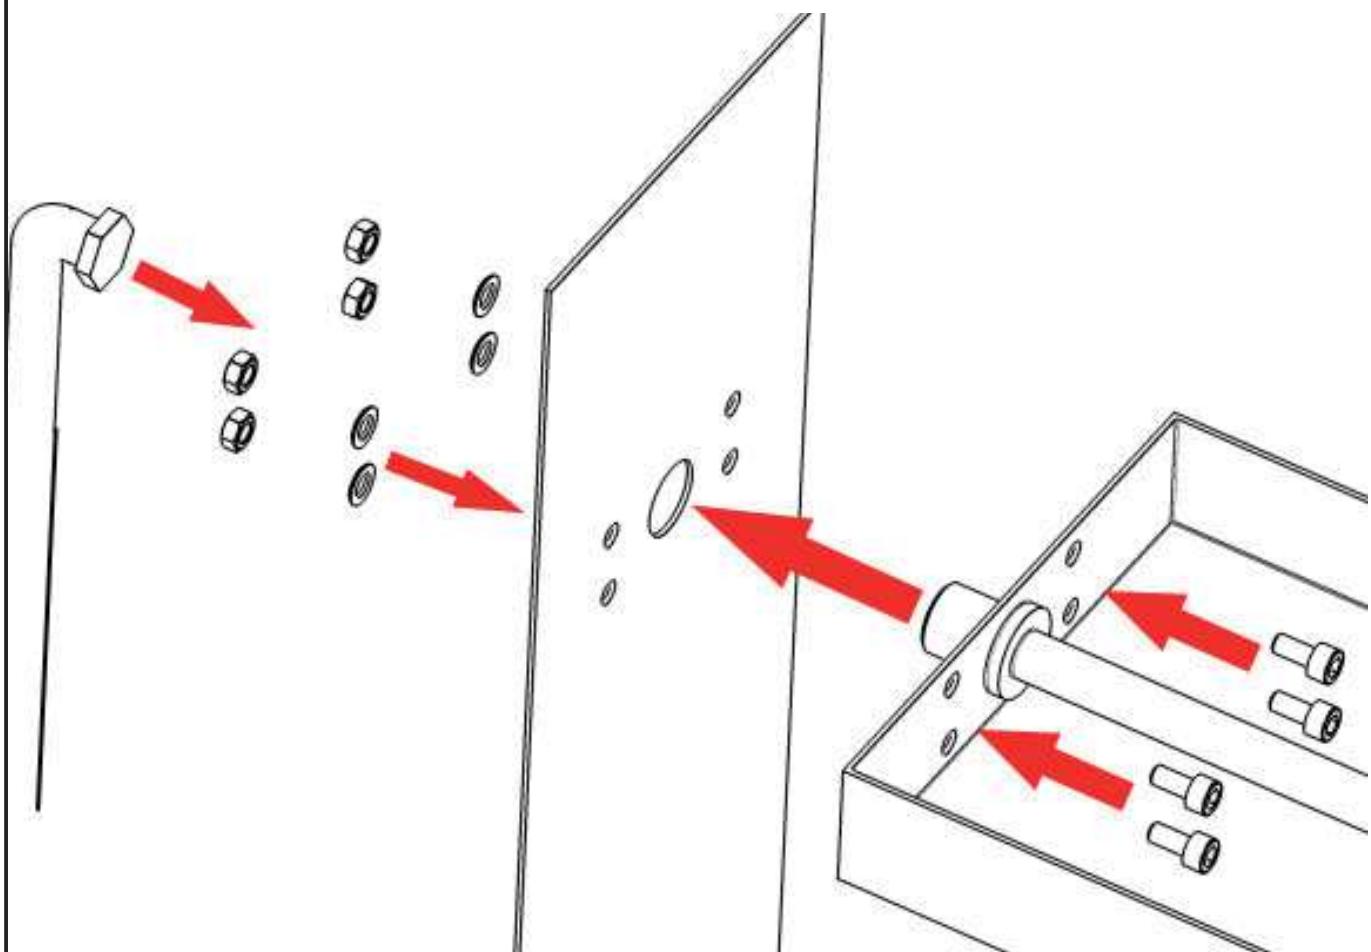


Fissaggio pannello frontale

Front panel fixing

Fixation du panneau frontal

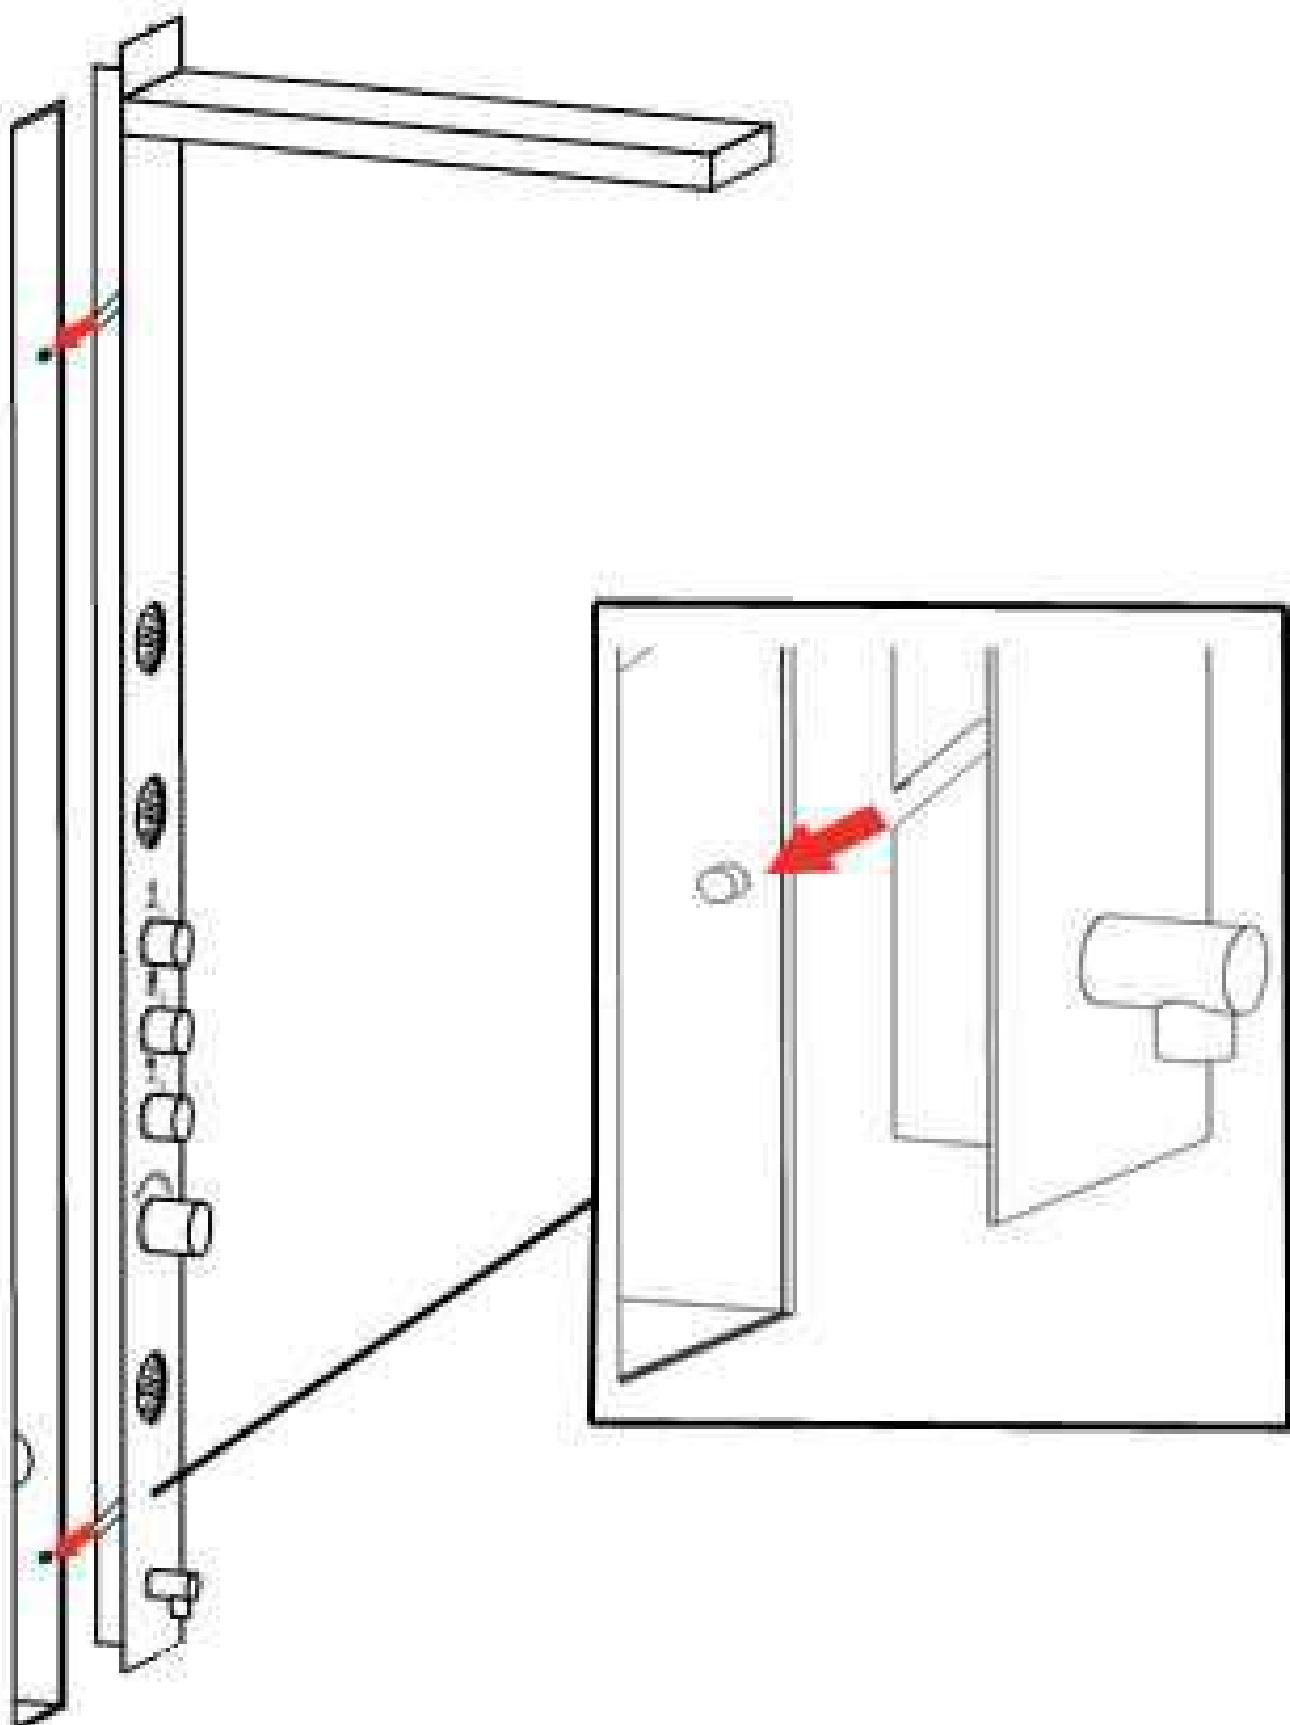

Fissaggio doccino
Handshower fixing
Fixation douchette

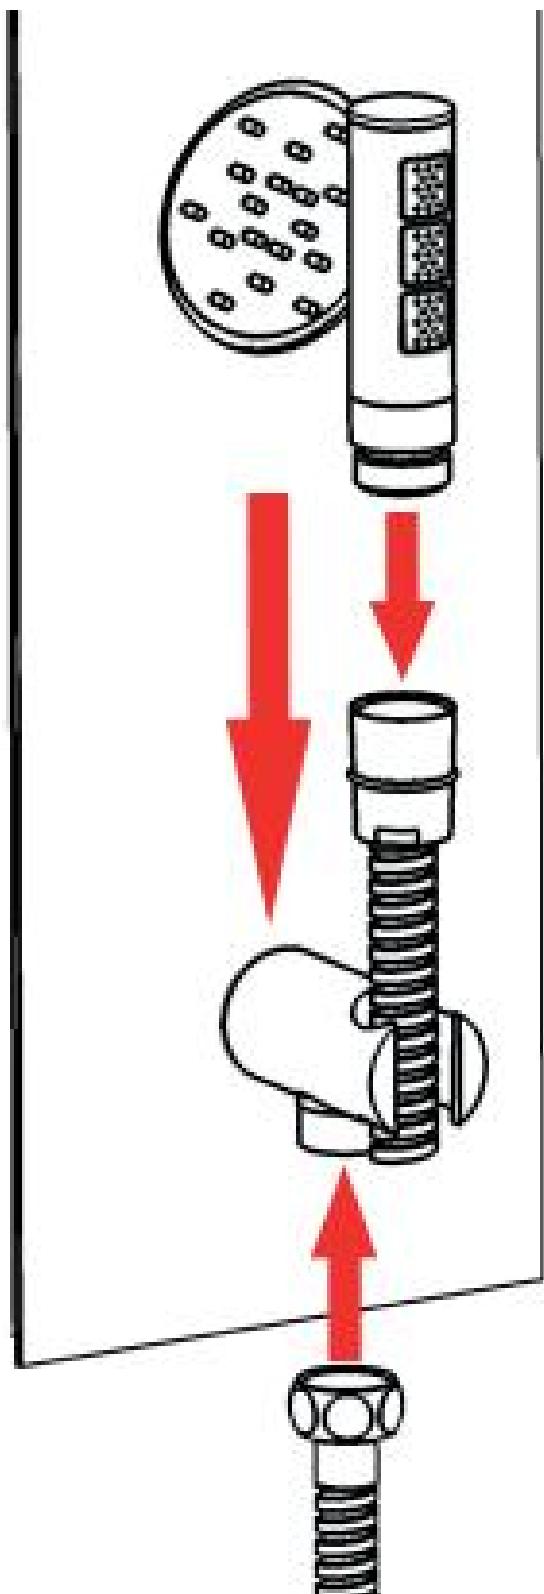

IMPORTANT

Pressure & Temperature Requirements.

- ❖ Hot and cold water inlet pressures should be equal.
- ❖ Inlet pressure range: 150-1000 kPa
- ❖ New Regulation: -500 kPa maximum operating pressure at any outlet within a building.
(Ref. AS/NZS 3500.1-2003, Clause 3.3.4)
- ❖ Maximum hot water temperature: 80°C.



iB Rubinetterie S.p.A.

Via dei Pianotti 3/5
25068 SAREZZO (BS) Italy
Iscr. Reg. Impr. BS 01785230986
R.E.A. BS 352087
P.IVA IT01785230986
Capitale Sociale € 420.000,00 i.v.
phone +39 030 802101
fax +39 030 803097
info@ibrubinetterie.it
www.ibrubinetterie.it