









ASSEMBLY INSTRUCTION

B563-1473



NO.	Quantity	Accessory
A	8	 A
C	10	 C
D	32	 25×8mm
E	4	 J-020-2~H14cm
F	42	 40×5mm
G	1	
H	2	 19cm
I	10	 black cotton pad ϕ 30mm

Step.	Please refer to the picture for specific operations
①	use the woodscrew F to fix the headboard, bedside, and bedend, install the accessories C, and stick on the cotton pad I
②	Use angle iron A and screw D to fix the headboard and bedside, and install the feet E
③	Use angle iron A and screw D to fix the headboard and bedend, and install the feet E
④	Install the stand H and the slat

FIG. 1

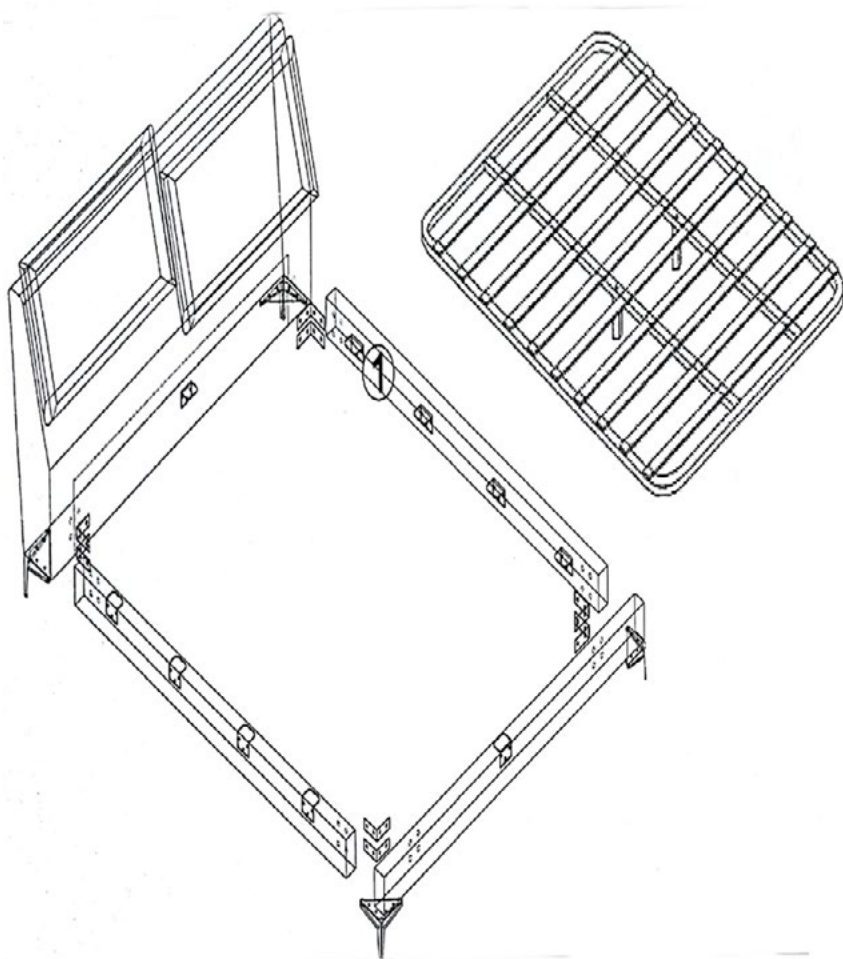


FIG. 2

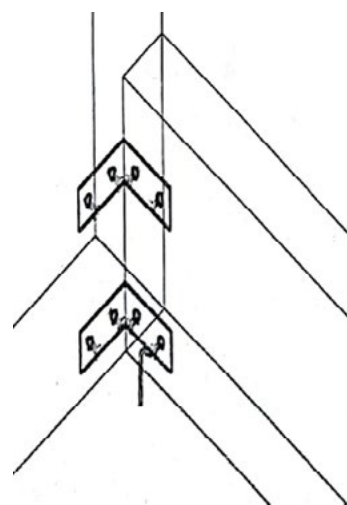


FIG. 3

