

Schutzrosette
Protective rose

- Ⓛ **Montageanleitung**
- ⓐ **Installation instructions**
- ⓕ **Montage**
- Ⓝ **Montage van**
- Ⓜ **Istruzioni di montaggio**

HEWI



Schutzrosette R-Technik

Protective rose r-technology

306.23ES (PZ, KABA)


306.23ESF (PZ, KABA)

Drückerrosettenmontage nach separater
Montageanleitung

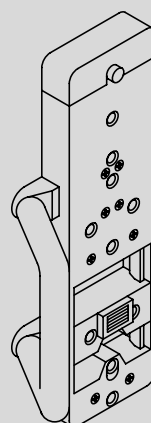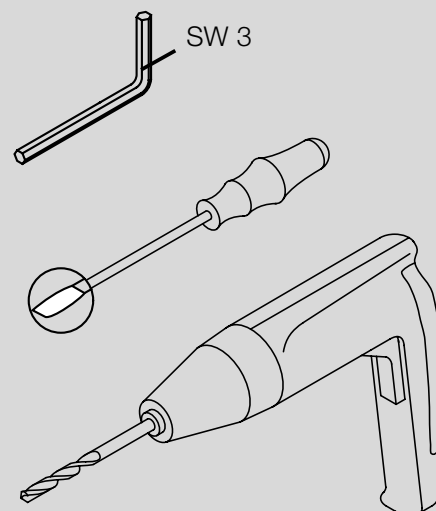


HEWI


1

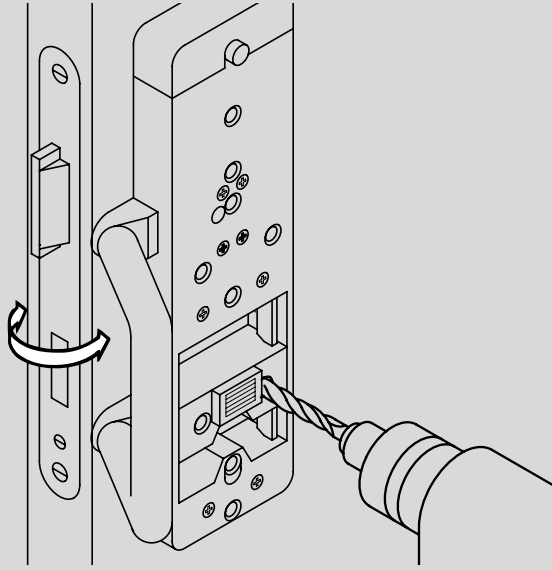


2

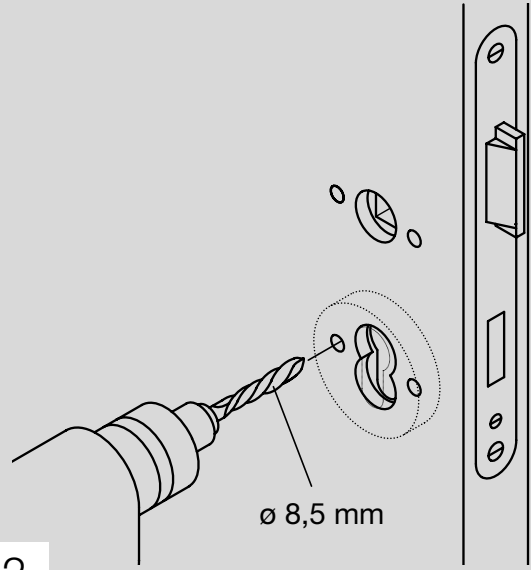


3

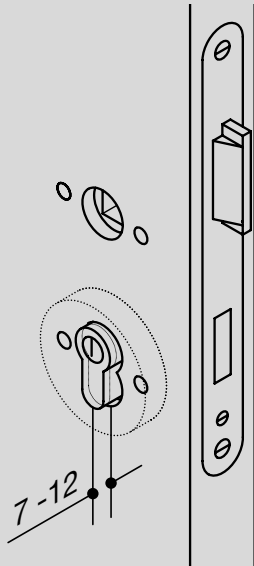


3a

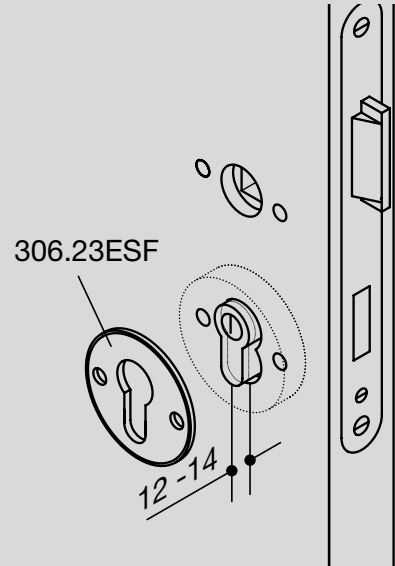

4



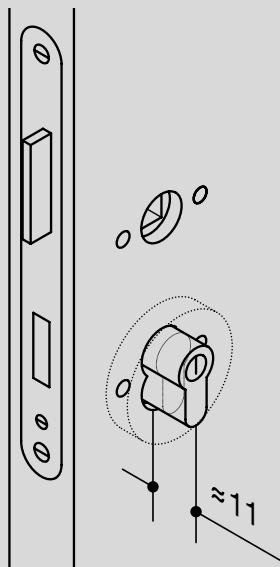


5

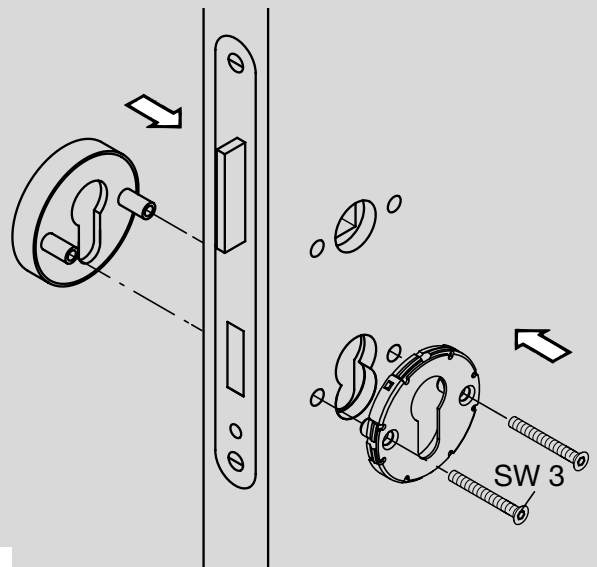

Schutzrosette R-Technik

Protective rose r-technology

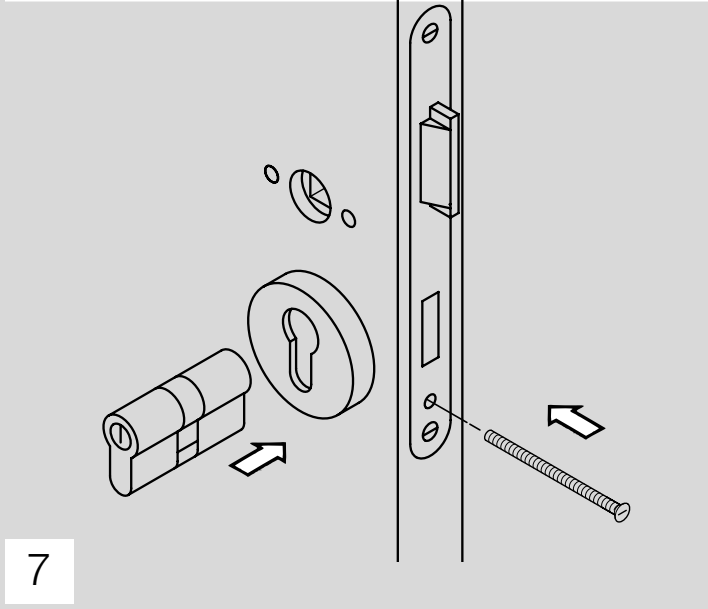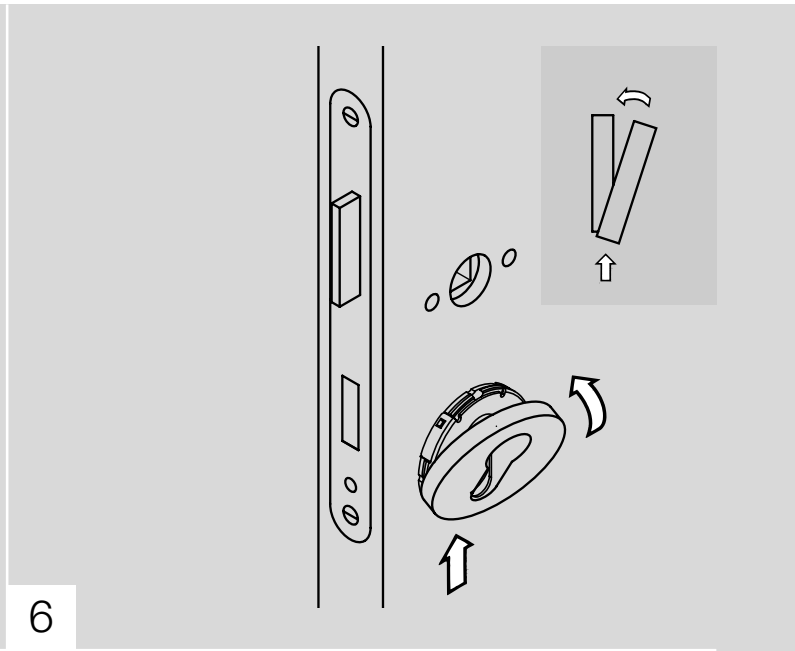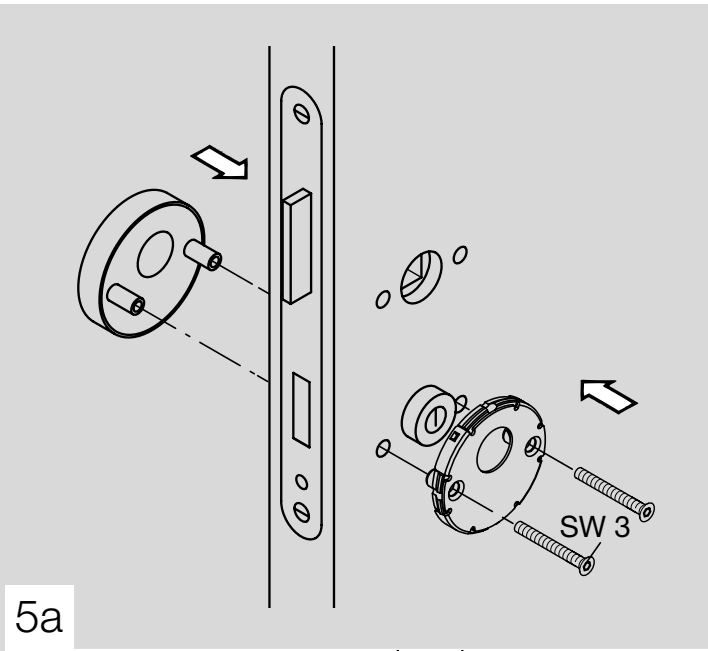

Demontage

To remove

