

Schutzrosette mit Zylinderabdeckung

Protective rose with cylinder cover

- Ⓚ **Montageanleitung**
- ⒼⒷ **Installation instructions**
- Ⓕ **Montage**
- ⓃⓁ **Montage van**
- Ⓜ **Istruzioni di montaggio**
- Ⓔ **Montaje instrucciones**

HEWI

Schutzrosette R-Technik

Protective rose r-technology



306.23ESZ

306.23XAESZ

306.23XBESZ

306.23XCESZ

306.23ESZF

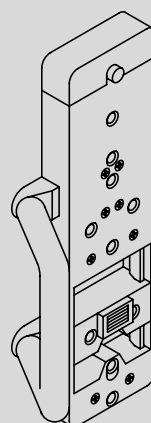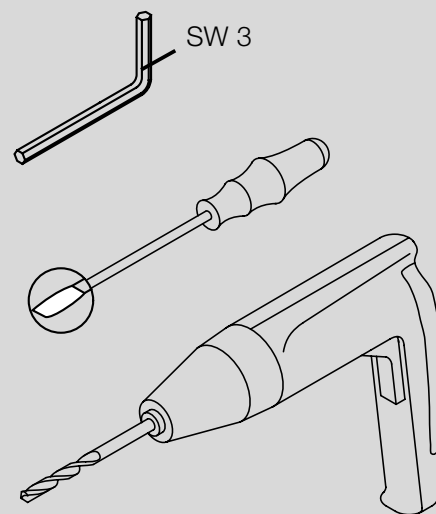


HEWI


Schutzrosette R-Technik

Protective rose r-technology


1

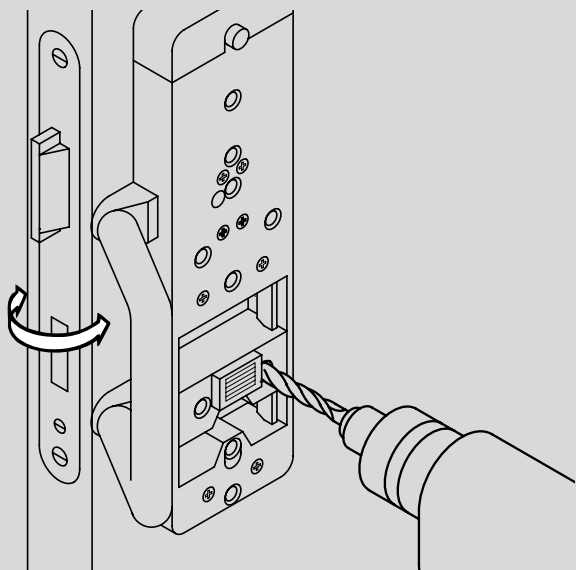


2

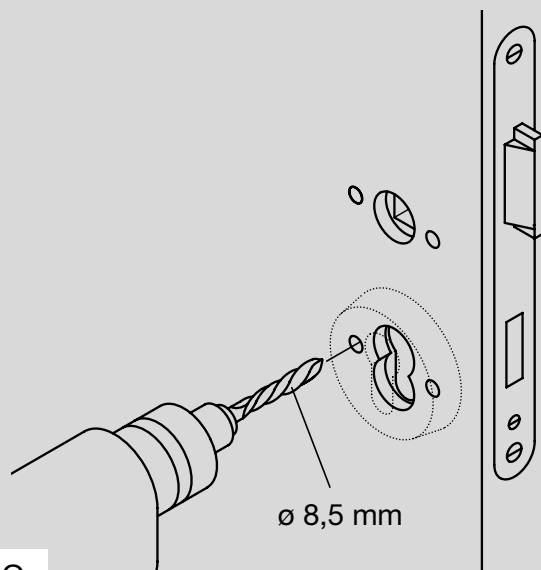


3

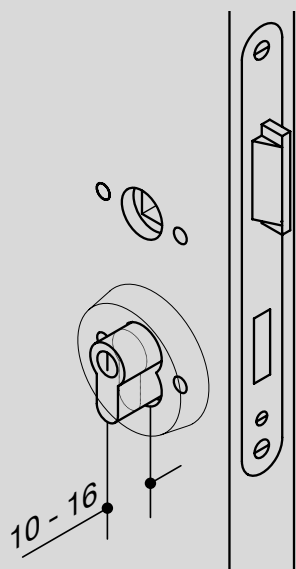


4

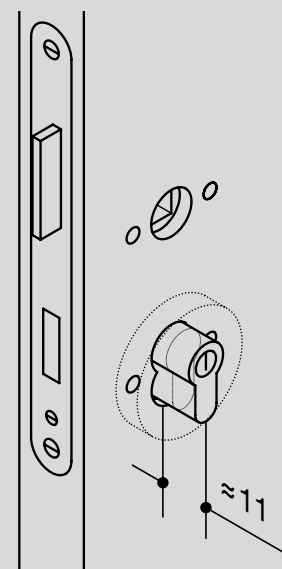

5

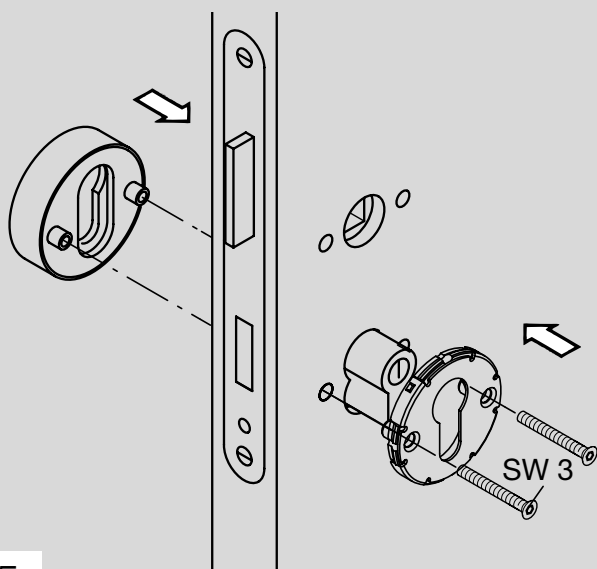

6

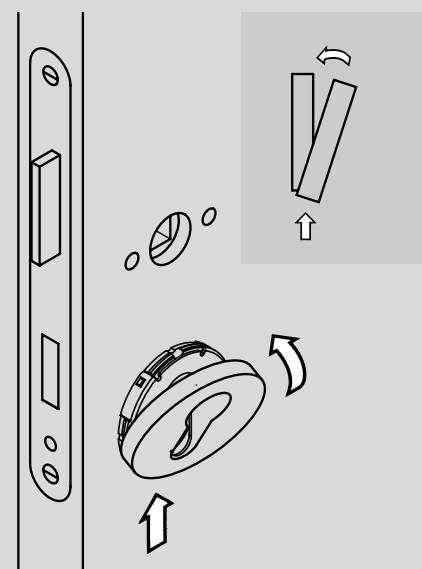

Demontage

To remove

