

Installation Guidelines

PTLV52

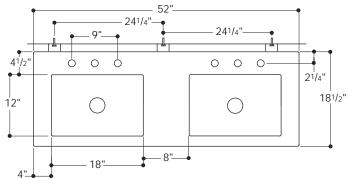

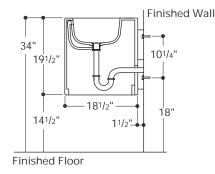

IMPORTANT:

- > Blocking in the wall to secure sink is mandatory.
- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of the sink must keep this information for future reference.
- > Be sure your installation conforms to local codes.
- ➤ Refer to the specification and assembly drawings attached.
- ➤ Inspect this product to assure you have all parts required for proper installation.
- > Do NOT use putty during this installation.

ROUGH IN:

IMPORTANT: 2x6 blocking to secure the sink to the wall is mandatory.

 Install 2x6 blocking in the wall at the proper locations to make sure the 6 mounting bolts can be threaded into the blocking.

- 2. Using the template provided, mark and drill 6 holes for securing the 3 Corian® mounting brackets.
- 3. Place the Corian® mounting brackets against the wall then secure them to the wall using the 6 lag screws provided.
- 4. Verify that the brackets are level and plumb; readjust or shim(not included) if necessary.
- 5. Attach an aluminum rail to each Corian® mounting bracket using the 6 machine bolts provided.
- 6. Verify that the rails are level and plumb; readjust as required.
- 7. Dry fit the sink onto the brackets and verify that the sink is level and supported.
- 8. Install the drains and faucets. Note that the overflow assembly must be installed onto the flange prior to tightening the drain body up against the overflow collar.
- 9. Remove the sink and apply silicone to the top and front surfaces of the brackets.
- 10. Place the sink onto the brackets while making sure the silicone does not get wiped off as the sink is being installed.
- 11. Verify that the sink is stable, level and plumb; readjust or shim as required.
- ➤ If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST)

These guidelines have been prepared for the professional contractor to aid in the installation of: