

# Windward®

5' BubbleMassage™ Bath **K-1112-GLA** 

#### **Features**

- 120 airjets release thousands of bubbles that surround, support, and massage the body.
- Variable-speed blower lets you adjust massage intensity to 18 levels.
- Decked oval shape creates a graceful and spacious bathing experience.
- Molded lumbar support and armrests offer extra comfort while bathing.
- Integral apron.
- Four-sided integral flange helps prevent water from seeping behind wall and simplifies alcove installation.
- Immediate and manual purge cycles remove residual water from air channels after use.

#### Material

Acrylic.

# **Hydrotherapy**

BubbleMassage.

### Installation

- Left drain.
- Alcove.

### **Recommended Products/Accessories**

K-11677 Bath Drain K-7166-AF Bath Drain K-24916 Wireless Music Kit K-23726 Drain treatment K-23732 Tub & shower cleaner



## Codes/Standards

ASME A112.19.7/CSA B45.10 CSA B45.5/IAPMO Z124 ASTM E162 ASTM E662 UL 1795

KOHLER® Plastic Baths and Receptors Lifetime Limited Warranty KOHLER® Hydrotherapy Components Five-Year Limited Warranty

See website for detailed warranty information.

### Available Colors/Finishes

Color tiles intended for reference only.


Color	Code	Description
	0	White
	96	Biscuit
	47	Almond





# Windward®

# 5' BubbleMassage™ Bath K-1112-GLA

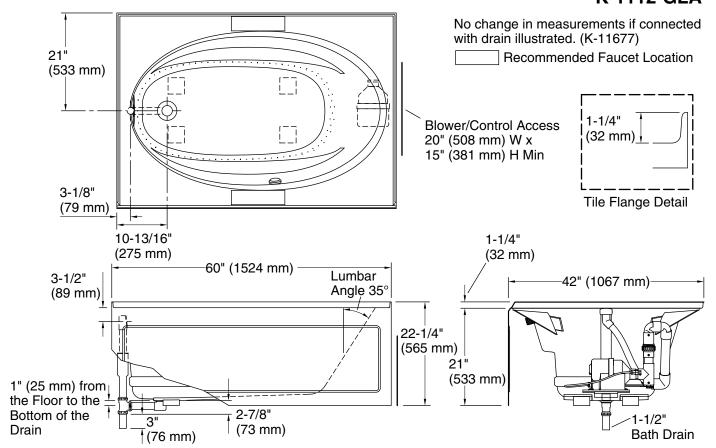

## **Required Electrical Service**

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI). Outside North America, this device may be known as a Residual Current Device (RCD).

Blower: 120 V, 15 A, 60 Hz

#### **Technical Information**

All product dimensions are nominal.

Installation: Three-wall alcove

Drain location: Left

Basin area, bottom: 43" x 20-1/2" (1092 mm x 521 mm)
Basin area, top: 53-1/2" x 32-1/8" (1359 mm x 816 mm)

Weight: 120 lbs (54.4 kg)

Minimum floor load: 36 lbs/ft² (175.8 kg/m²)

Water depth: 15" (381 mm)
Water capacity: 57 gal (215.8 L)

Electrical component Blower: 120 V, 10 A, 60 Hz

rating:

Minimum flat for door: 3-1/4" (83 mm)

#### **Notes**

Measure your actual product for rough-in details. Install this product according to the installation instructions.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Remote blower installation kit K-1446 is available for relocating the blower. Provide access for servicing the blower.

Do not relocate or alter the PVC tee or coiled flexible tubing connected to the blower. Follow the blower relocation instructions exactly.

If installing a rim-mount faucet, make sure there is no interference above or below the deck before drilling any holes.

