

Sunward®

5' BubbleMassage™ Bath K-1162-GW

Features

- Bask® heated surface creates spa-like relaxation with soothing warmth on your back, shoulders, and neck.
- Three heat settings allow you to customize the surface temperature.
- 120 airjets release thousands of bubbles that surround, support, and massage the body.
- Variable-speed blower lets you adjust massage intensity to 18 levels.
- Oval shape creates a graceful and spacious bathing experience.
- Molded lumbar support and armrests offer extra comfort while bathing.
- End drain.

Material

Acrylic.

Hydrotherapy

BubbleMassage.

Installation

Drop-in.

Recommended Products/Accessories

K-11677 Bath Drain K-576 Undermount installation kit for K-1162/K-1163 baths K-24916 Wireless Music Kit K-23726 Drain treatment K-23732 Tub & shower cleaner



Codes/Standards

ASME A112.19.7/CSA B45.10 CSA B45.5/IAPMO Z124 ASTM E162 ASTM E662 UL 1795

KOHLER® Plastic Baths and Receptors Lifetime Limited Warranty KOHLER® Hydrotherapy Components Five-Year Limited Warranty

See website for detailed warranty information.

Available Colors/Finishes

Color tiles intended for reference only.


Color	Code	Description
	0	White
	96	Biscuit
	47	Almond





Sunward®

5' BubbleMassage™ Bath K-1162-GW

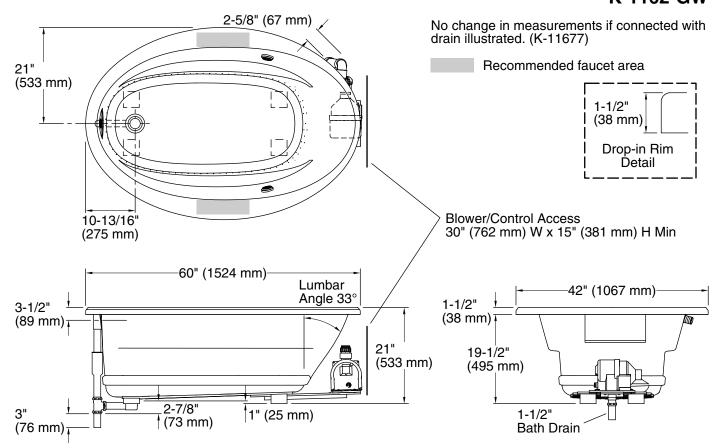

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI). Outside North America, this device may be known as a Residual Current Device (RCD).

Blower, Heated Surface:

120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.

Installation: Drop-in Drain location: End

Basin area, bottom: 43" x 21-9/16" (1092 mm x 548 mm)
Basin area, top: 53-1/2" x 32-1/8" (1359 mm x 816 mm)

Weight: 116 lbs (52.6 kg)
Minimum floor load: 35 lbs/ft² (170.9 kg/m²)

Water depth: 15" (381 mm)
Water capacity: 57 gal (215.8 L)

Template: Drop-in, 1042556-7, required, included

Electrical component Blower: 120 V, 10 A, 60 Hz

rating: Heated Surface: 120 V, 60 A, 60 Hz, 65

W

Notes

Measure your actual product for rough-in details. Install this product according to the installation instructions.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Remote blower installation kit is available for relocating the blower. Provide access for servicing the blower.

Kit is required for under-mount installations (sold separately).

Do not relocate or alter the PVC tee or coiled flexible tubing connected to the blower. Follow the blower relocation instructions exactly.



