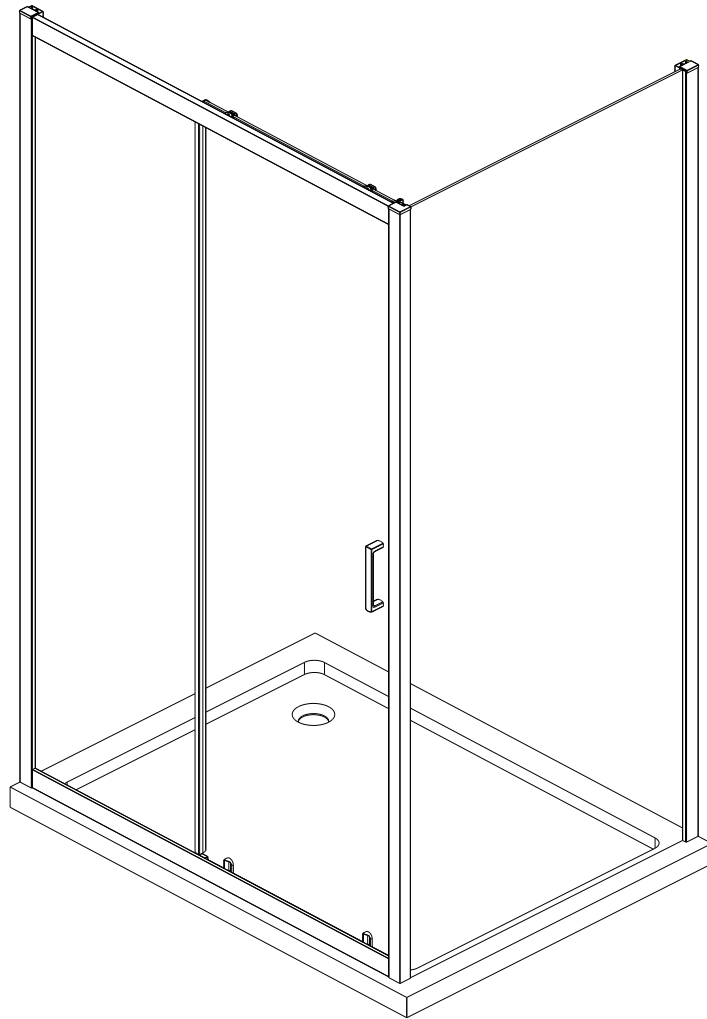# SIDE PANEL

INSTALLATION GUIDE

IMPORTANT:Please read the complete instructions before commencing fitting.

Make sure the tray is 100% level in all directions.
Check that you have the tools required.☐
Check the installation site is compatible with the size of door supplied.☐
Check all the enclosure components are present.☐
Check the installation kit is complete.☐
Do Not attempt to install the product unless you can tick all 4 boxes.
The wall plugs supplied with the installation kit are for use in solid walls.Hollow or'stud
partition'walls will require alternative fixings.Please consult a hardware supplier for the correct type.
It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

ATTENTION:TAKE EXTREME CARE WHEN HANDLING GLASS,WEAR PROTECTIVE EYEWEAR AND CLOTHING.DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.
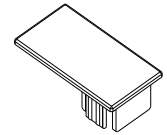
Fixing kit components

4x16mm				
x3	x3	x3	x2	x1
2SS008	2SS009	2SY50	MB0078/MB0079	MB0075

Tools required

ø6mm

silicone

TAPE MEASURE

1
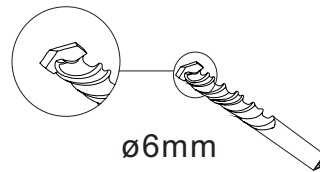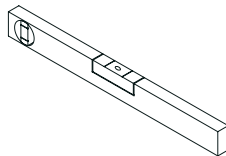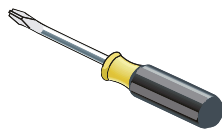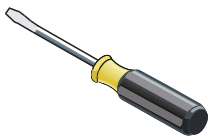
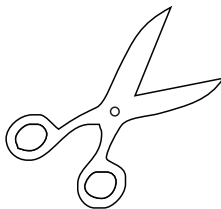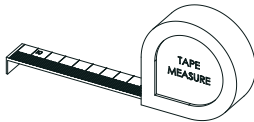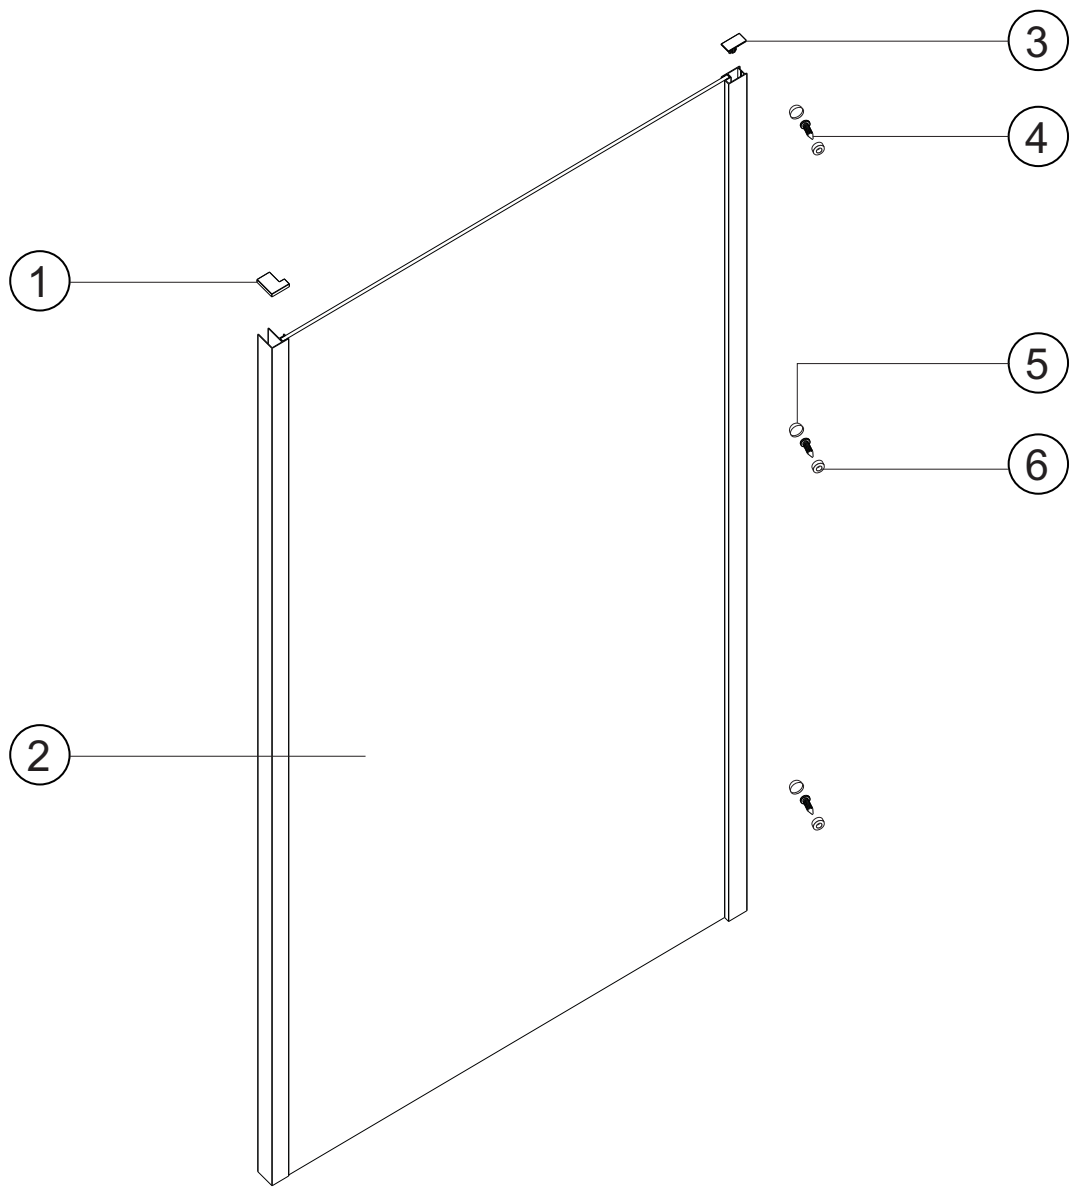| No.	Qty	Part No.
1	2	MB0078/MB0079
2	1	A
3	1	MB0075
4	3	2SY50
5	3	2SS008
6	3	2SS009

1

Please ensure your tray is 100% level in all directions before fitting your enclosure.

100% Level !
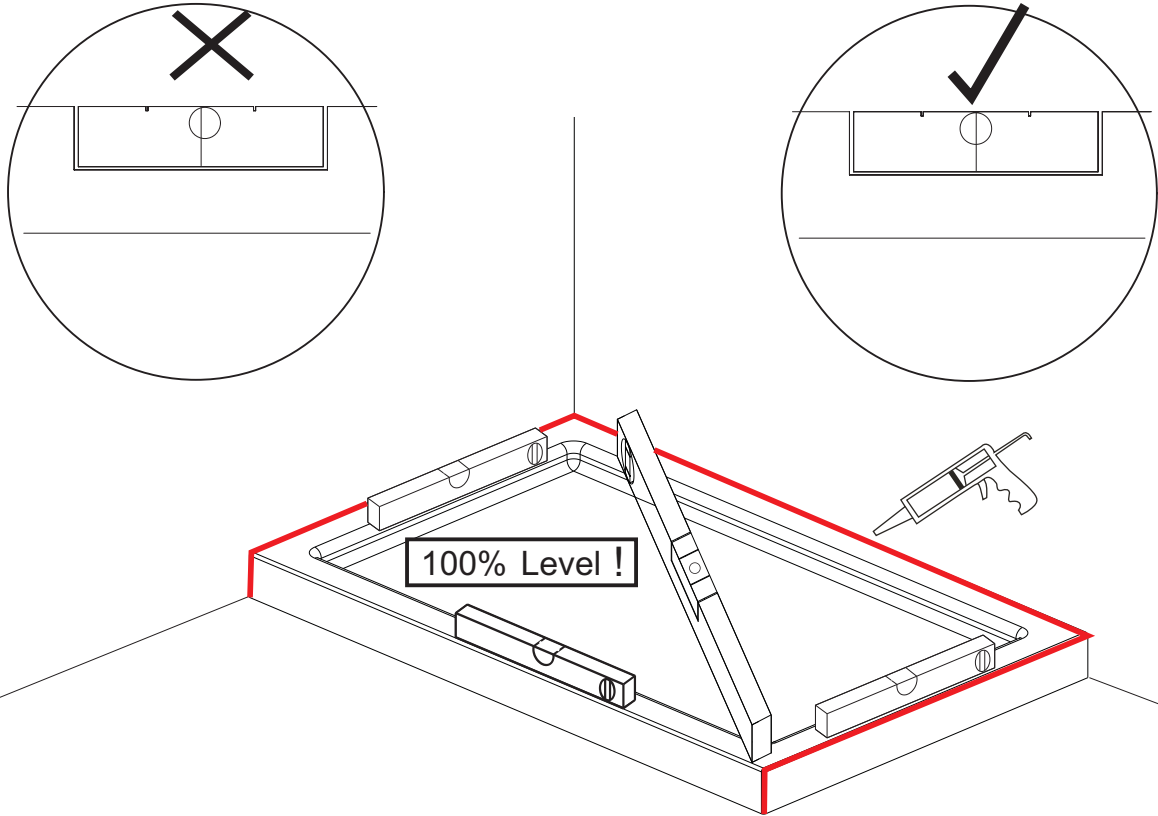
2

Determine your step in from the edge of the tray. 20mm is recommended.
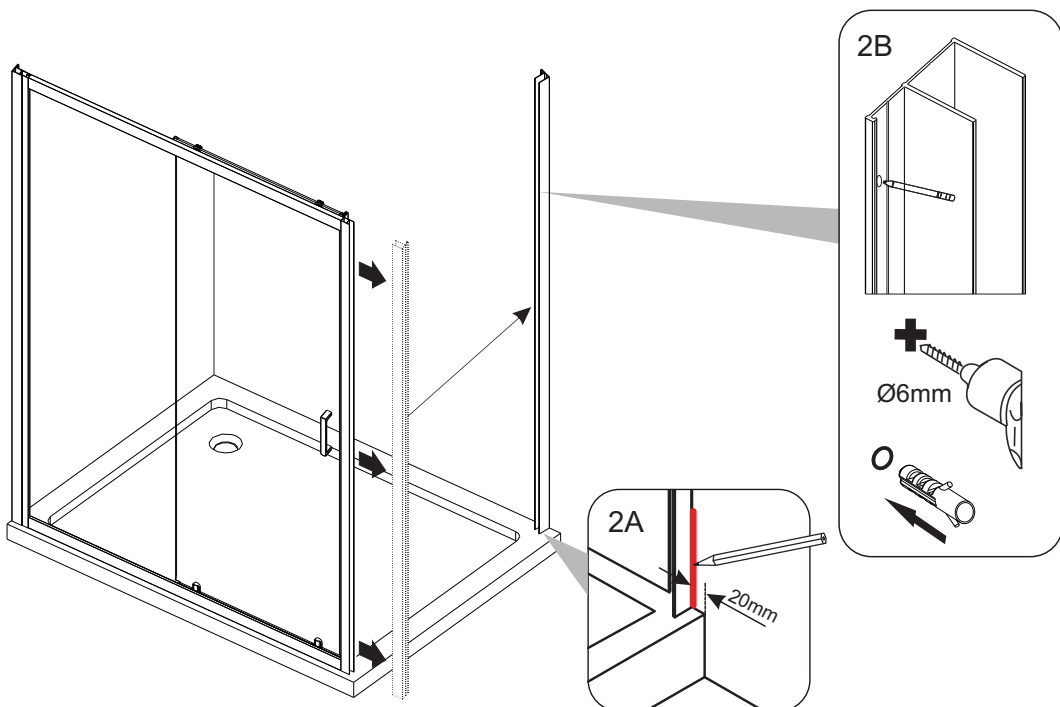Plumb your wall profiles on each side then mark and drill your fixing positions.
You can then remove your wall profiles and begin the frame assembly off the tray.

2B

Ø6mm
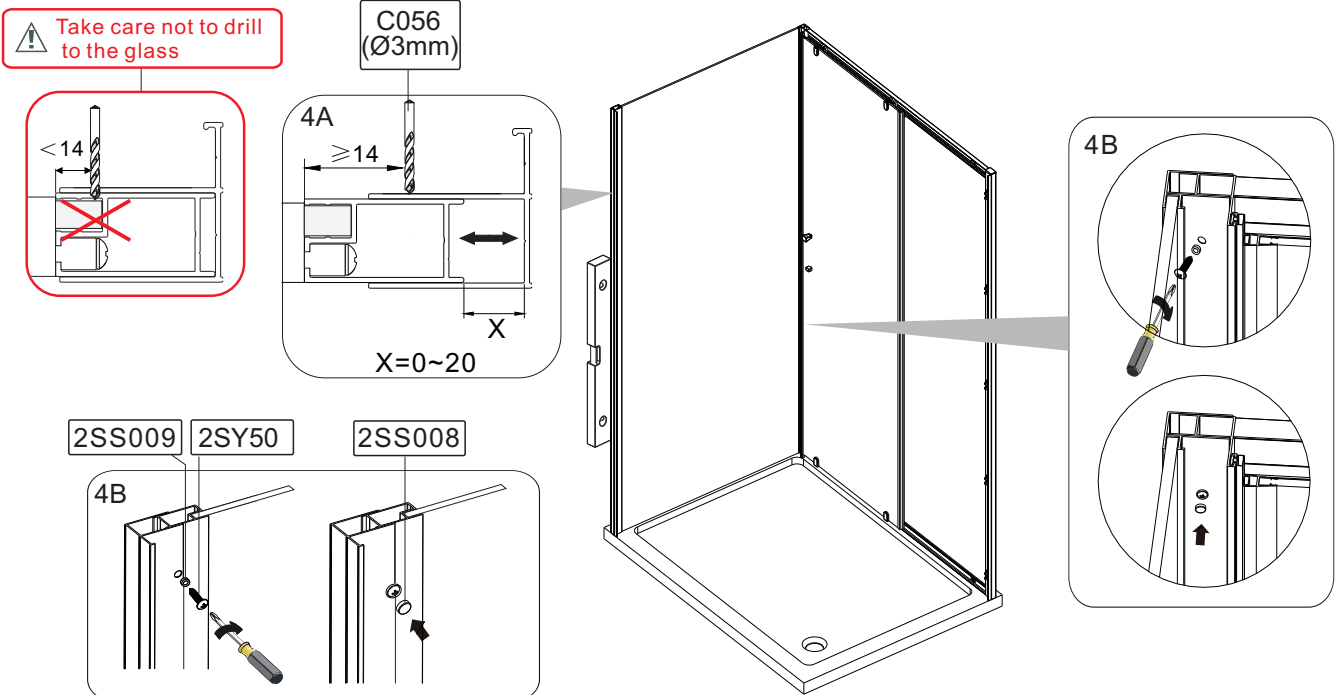
2A

20mm

Use wall profile from door

3

After your wall profiles have been fixed you can square your side panel on the tray and fit the wall profiles to the upright profiles as shown below.

3A

2SS009
2SY51

2SS008

3B
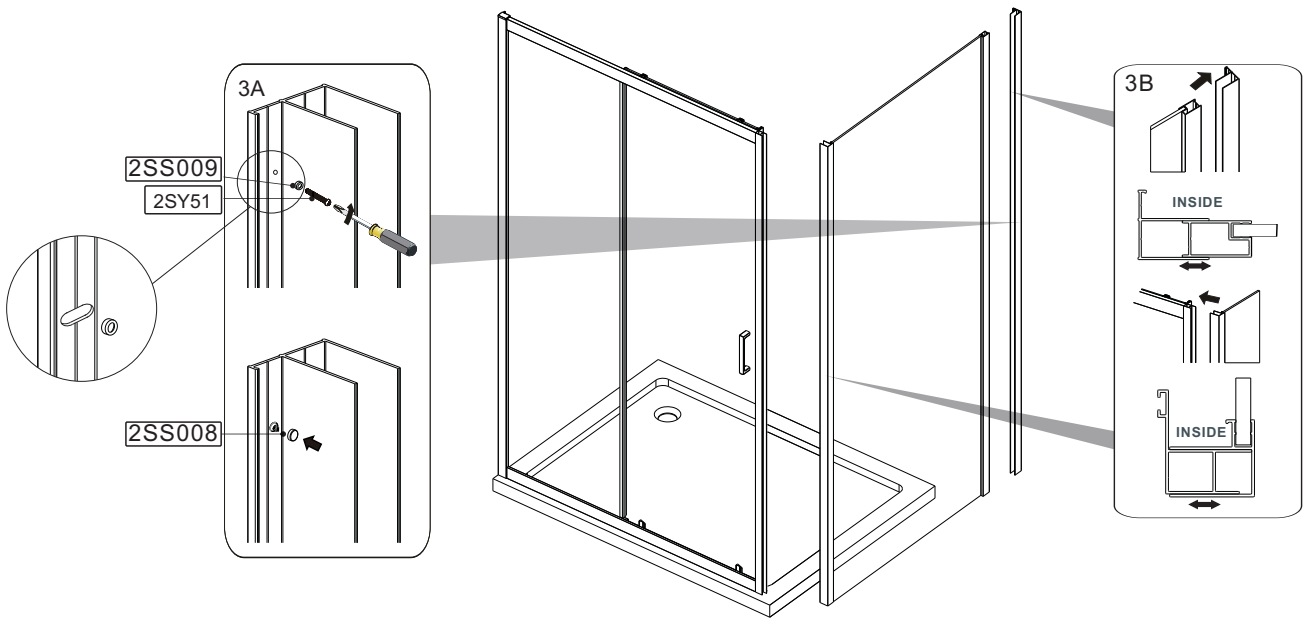
INSIDE

INSIDE

NOTE! Fix the screw through the center of the slot.
This is necessary to allow enough room either side
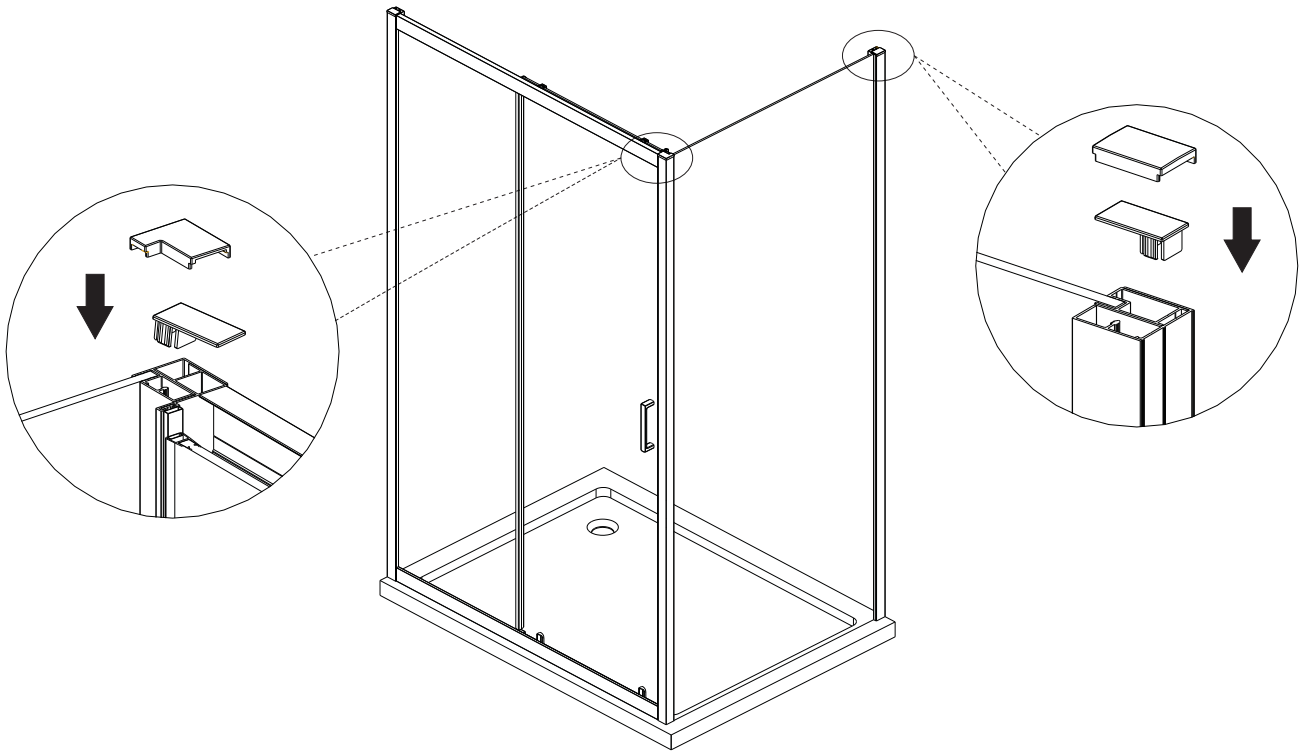for the screw cover caps

4

4A From inside drill the frame top, middle and bottom of the wall profile and corner post making sure to step in a Min. 14mm from the edge of the frame.
4B Fix the frame with screws and cover clips, then fit the cover caps.

⚠ Take care not to drill to the glass

< 14

C056
(Ø3mm)

4A

≥14

X

X=0~20

4B

2SS009   2SY50   2SS008

4B

5

Fit the top cover caps

6

Use a quality sealant to seal the finished door.
Seal any joints between profiles on bottom.
Seal on the outside along the bottom rail and
between the wall and the wall profile.
Seal 50mm vertically between the frame and
the wall profile.
DO NOT USE THE ENCLOSURE FOR
24 HOURS AFTER SEALING

50mm

silicone

24 h.

$$\text{C}\,\epsilon$$
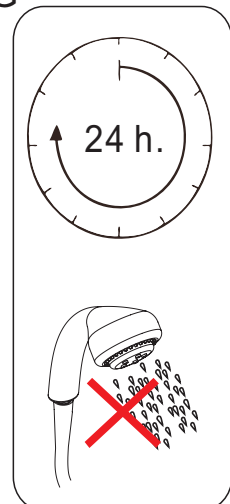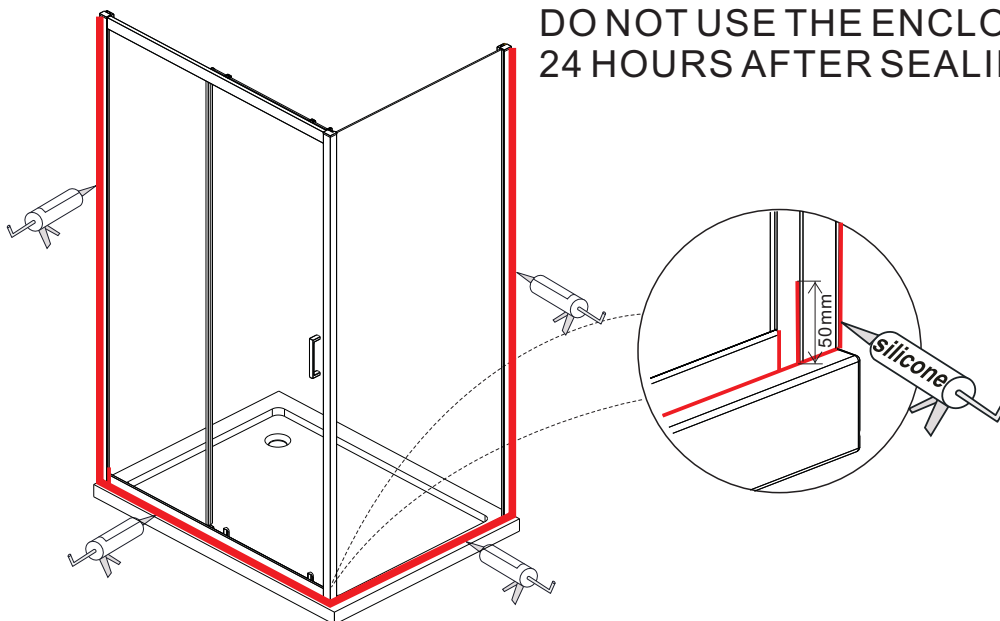
Merlyn Industries LTD (MER09)
DOP:CENMB1.1
16
EN 14428
Shower enclosures with aluminium profiles and safety glass
Cleanability   :Pass
Impact resistance/ shatter properties   :Pass
Durability   :Pass

To download the Declaration of Performance (DOP) for this product please use the link below.
https://merlynshowering.com/wp-content/uploads/2016/11/New-MBox-Enclosures-DOP-CENMB1.1.pdf