


Installation Guidelines

STYLE No. SPLT01[†]

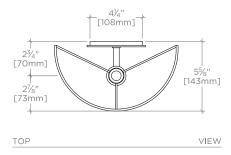

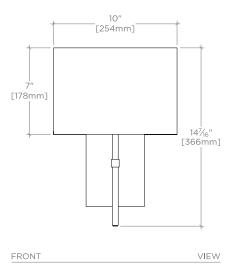

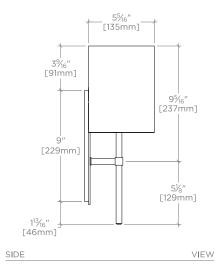

SPECIFICATIONS:

Bulb Base Size: Candelabra E-12⁺

Bulb Type: 60 watt max incandescent B10 (not

supplied)†

Installation Type: Wall Mounted Junction Box Orientation: Any

Junction Box Size (L x W): 3 1/2" x 3 1/2" Octagonal

Max Wattage: 60 watts† Number of Bulbs: One

Required Electrical Feeds: Black or "Hot" lead wire. white or "Neutral" lead wire and a green or bare

copper "Ground" wire.

Voltage: 120 volts[†]

[†] UK Style No. **SPO1LT** is supplied with B15 Bayonet Bulb Base and required a 40 watt max B15/SBC bulb. Max wattage is 40 watts and Voltage is 240 volts.

IMPORTANT:

- WARNING: The power supply must be turned off prior to installation. Turn off the main electrical supply to the junction box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.
- > To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- > This product is U.L. certified and is suitable for damp or dry locations. The U.L. listing mark can be found on the inside of the cover plate.
- ➤ Be sure your installation conforms to all federal, state, and local codes.
- > This product must be installed by a professional licensed electrical contractor.
- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- ➤ Max wattage for this product is 60 watts[†] for incandescent Candelabra base light bulbs. Product is not compatible with fluorescent bulbs.
- Inspect this product to ensure you have all parts required for proper installation.
- > Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.

These guidelines have been prepared for the professional contractor to aid in the installation of: SPENCE WALL MOUNTED SINGLE ARM SCONCE.

STYLE NO. SPLT01, SP01LT (UK).

All dimensions are based on origin specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS

INSTALLATION:

- ightharpoonup REQUIRED: Install a $3\frac{1}{2}$ " octagonal electrical junction box at the desired height.
- 1. Remove the mounting plate (6) by unthreading the set screws (5) on the top and bottom of the cover plate (4) and ensure that the holes on the mounting plate align with the screw holes in the junction box.
- 2. Pull the wires in the junction box through the center hole of the mounting plate (6). Attach the mounting plate to the box using 2 #8-32 screws (8) making sure to keep the proper alignment of the plate.
- 3. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the mounting plate with the ground screw (7) provided.
- 4. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
- 5. Repeat step 4 with the black fixture wire and the black wire from the junction box.
- 6. Place the cover plate (4) over the mounting plate (6) and tighten the set screws (5) on the cover plate.
- 7. Place the shade (2) over the fixture body (3) in the proper orientation so that the support wires and ring are towards the bottom of the shade. Then tighten the shade down using the knurled ring (1).
- 8. Install a 60 watt Candelabra base light bulb (not supplied)[†].
- 9. Turn on the power to the junction box at the fuse box/circuit breaker.
- ➤ If further assistance is required, please contact Product Support at 1-800-927-2120 Ext. 2 (8am-6pm EST).

These guidelines have been prepared for the professional contractor to aid in the installation of: SPENCE WALL MOUNTED SINGLE ARM SCONCE. STYLE NO. SPLT01, SP01LT (UK).

All dimensions are based on origin specification and are subject to change and variation. Please consult your Design Associate for current specifications.


WATERWORKS


Spence Wall Mounted Single Arm Sconce

Installation Guidelines

ITEM NO.	DESCRIPTION	QTY.
1	Knurled Shade Retaining Ring	1
2	Shade	1
3	Fixture Body	1
4	Cover Plate	1
5	Set Screws, 2mm Hex	2
6	Mounting Plate	1
7	Ground Screw	1
8	Mounting Screws, #8-32	2
9	Wire Nuts (Not Shown)	3
10	Allen Wrench (Not Shown)	1
		1.1

^{* 60} Watt Candelabra Base Light Bulb Not Supplied†

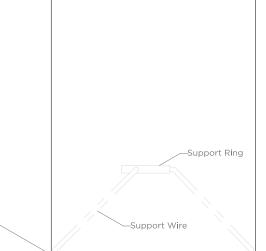

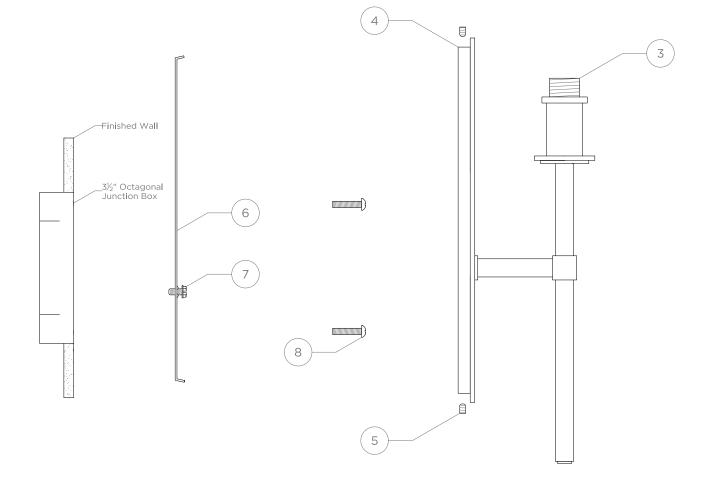

These guidelines have been prepared for the professional contractor to aid in the installation of: SPENCE WALL MOUNTED SINGLE ARM SCONCE. STYLE NO. SPLT01, SP01LT (UK).

All dimensions are based on origin specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS